

SONY  
AUX  
RM-S33

ООО "Перспектива"

www.clickpdu.ru

г.Москва, Пятницкое ш-е, дом 18, 3 этаж, пав. 583

Тел: +7(495)660-17-96

Email: info@clickpdu.ru



| Layout Keys   | Direct       | Shift | Layout Keys   | Direct        | Shift         |
|---------------|--------------|-------|---------------|---------------|---------------|
| ⏻             | POWER SYSTEM |       | ▲             | PAUSE CD      |               |
| 🔊             |              |       | ▼             | STOP CD       |               |
| 1             | PLAY MD      |       | ▶             | >>  CD        |               |
| 2             | PAUSE MD     |       | ◀             | I<< CD        |               |
| 3             | STOP MD      |       | OK            | PLAY CD       |               |
| 4             |              |       | RETURN        |               |               |
| 5             |              |       | MENU          | FUNCTION      |               |
| 6             |              |       | RED ■         |               |               |
| 7             | << CD        |       | GREEN ■       | TAPE A STOP   | TAPE B STOP   |
| 8             |              |       | YELLOW ■      | TAPE A PLAY < | TAPE B PLAY < |
| 9             | >> CD        |       | RI UP ▶       | TAPE A PLAY > | TAPE B PLAY > |
| 0             |              |       | ◀◀ / S. BW -  |               |               |
| +10           |              |       | ▶▶ / SUBW +   |               |               |
| EXIT          |              |       | ⏮ / L. ◀      | TAPE A <<     | TAPE B <<     |
| EJECT         |              |       | ⏭ / R. ▶      | TAPE A >>     | TAPE B >>     |
| TITLE         |              |       | ▶ / KEY -     | PRESET -      |               |
| PBC           |              |       | ▶ / KEY +     | PRESET +      |               |
| CLEAR         | CLEAR CD     |       | ECHO / VOL -  | VOLUME -      |               |
| SUBT          |              |       | ECHO / VOL +  | VOLUME +      |               |
| AUDIO         |              |       | REPEAT        | REPEAT CD     |               |
| ZOOM          |              |       | BETUP         |               |               |
| ANGLE         |              |       | DISPLAY       |               |               |
| SLEEP TIME    | SLEEP        |       | SN            |               |               |
| MARK E.Q.     |              |       | PROG USB      | EDIT CD       |               |
| SYSTEM V.MODE | TUNER/BAND   |       | RANDOM SKIP   | CHECK CD      |               |
| MODE L/R      |              |       | GOTO BROWSE   |               |               |
| A-B A.MODE    |              |       | SEARCH P.SCAN |               |               |