

**HUAYU®** English

**RM-L1098+8**

**Instruction for UNIVERSAL LCD/LED TV REMOTE CONTROLLER**

Thank you for using our company's remote controller products. When it is your first time using the remote, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following steps before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to Introduction:

RM-L1098+8 is the newest universal LCD/LED TV remote controller. Comprehensive care at different levels need. It can control most of the TV brands and famous brands. It can control nearly all models for TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your

**Battery Installation**

In accordance with the "+" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rechargeable), which is shown in the figure.

**Battery Description**

The remote controller is a low-power consumption product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or overheated, the lifetime will be shortened.

Please do not put old and new batteries or different types of batteries together.

In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries.

You'd better remove the batteries from the battery cabinet if you intend

**Methods for setting remote controller:**

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

2. Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter the mode of setting. Pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.

3. Test other function buttons (except SET, POWER, and VOLUME) on your TV, if they work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

4. Point to Point Method Searching

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding code of your TV on this remote control, for example, SKYWORTHY = "0".

La tabla de los símbolos correspondientes a la marca

5. Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the indicator lamp still on after one set, please use first one at first.

6. Test other function buttons which can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

**B. Manually searching for the code:**

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2. Press "SET" button, then "SET" button, till the indicator lamp lights, then release the button, the indicator will flash two times, the remote controller will be in the state of manually searching for the code.

3. Press the "VOLUME+" button one time, the indicator lamp will flash one time, pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.

4. The volume symbol appears on your TV, test other function buttons(except SET, POWER, and VOLUME button) can work well or not, such as "MUTE".

**C. Automatically searching code:**

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2. Press "SET" button, then "SET" button, till the indicator lamp lights, then release the button, the indicator will flash two times, the remote controller will be in the state of automatically searching for the code.

3. The volume symbol appears on your TV, test other function buttons(except SET, POWER, and VOLUME button) can work well or not, such as "MUTE".

**D. Alimputing code:**

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

2. Press "SET" button, then "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of imputing code.

3. Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the indicator lamp still on after one set, please use first one at first.

4. Test other function buttons (except SET, POWER, and VOLUME) on your TV, if they work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

**E. Restore factory Settings**

Press "SET" button, then "SET" button, till the indicator lamp lights, then release the button, the indicator will flash two times, the remote controller restore factory Settings.

\*\*\*\*\*

**Русский**

1. Поиск нужной марки телевизора с помощью ввода кода вручную

1. Включите телевизор и в первые коды найдите тот, который соответствует марке Вашего телевизора.

2. Одновременно нажмите кнопки "SET" и "POWER", пока не загорится индикаторная лампочка.

3. Введите три первых цифры кода, соответствующего модели телевизора, после ввода кода нажмите горячую уставку завершения.

4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

2. Установка нового кода

1. Включите телевизор и в первые коды найдите тот, который соответствует марке Вашего телевизора.

2. Одновременно нажмите кнопки "SET" и "POWER", пока не загорится индикаторная лампочка.

3. Введите три первых цифры кода, соответствующего модели телевизора, после ввода кода нажмите горячую уставку завершения.

4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

3. Автоматический поиск

1. Включите телевизор и направьте на него пульт.

2. Установите на пульт дистанционного управления соответствующий маркетинговый код.

3. Введите три первых цифры кода, соответствующего модели телевизора, после ввода кода нажмите горячую уставку завершения.

4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

4. Ручной ввод кода

1. Включите телевизор и направьте на него пульт.

2. Одновременно нажмите кнопки "SET" и "POWER", пока не загорится индикаторная лампочка.

3. Введите три первых цифры кода, соответствующего модели телевизора, после ввода кода нажмите горячую уставку завершения.

4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

5. Восстановление заводских настроек

Нажмите на пульт дистанционного управления "SET", пока не загорится индикаторная лампочка.

\*\*\*\*\*

**Technical parameters**

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: Two pieces of AAA Batteries
- After-sales service: If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to solve the problem with services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled.
- Note: To avoid that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product. The Company reserves the right that interpretation of this instruction manual and technical parameters could be changed without notice.

**Warm Tips**

If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of method. If you can't control your device, Please input the other codes according to sequence.
- If you have trouble with codes, but the indicator still light, just turn off the indicator code. If the indicator turn off, you need to restart from step 1.
- If you use the method "Manually" to search for the code, because the codes are too much, you need to wait patiently.

**000 AOC AOC GENERAL LCD-831 GENERAL LCD-832 IZUMI TL19H405B IZUMI 1512 EN 30303D HOB301 M1STB1K157 0657 HOB117 AKRA TC1860F1 HOB187 GK236-C15**

**013 014 015 016 017 018 019 020 021**

**022 023 024 025 026 027 028 029 030**

**B0063831 HVD209 RC1529 HOB228 LCD 831 HOB283 SUPRA 462STV -LC1504 HOB302 SUPRA 306 STV LC1515 HOB327 Supra RCF3b HOB328 Supra Y-72C HOB410 SUPRA RC6b**

