

LCD/LED TV REMOTE CONTROLLER

Русский

Поиск нужной марки телевизора с помощью ввода кода вручную

1. Включите телевизор и в перечне кодов найдите тот, который соответствует марке Вашего телевизора.



2. Одновременно нажимайте кнопки "POWER" и "SOURCE", пока не загорится индикаторная лампочка.



3. Введите три первых цифры кода, соответствующего модели телевизора, после ввода кода индикатор перестанет гореть, установка завершена



4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.



EN-33927A



EN2A27



EN-22652A



ENZH27HS



EN-31906D



EN2B27



EN-21662B



EN-31603B



ER-31607R



ER-22655HS



ER-22642R



ER-22641R



EN-31907



EN-32963HS



EN-31603A



EN-31603A



EN-21662



ER-32961HS



ER-22654



ER-22601A



ENZH27B



ER-33911BN



EN-33926A



CN3B16



CN3B12



CN3A26



CN3A26

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.



Inputting code:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.



2. Press "POWER" button, then press "SOURCE" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.



3. Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.



4. Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

