

HUAYU®


English

RM-L1107+8
**Instruction for UNIVERSAL
LCD/LED TV REMOTE
CONTROLLER**

Thank you for using our products. When it is the first time to put in the batteries, please try it first, if it does not work, then wait until the next time the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

Introduction:

RM-L1107+8 is the newest universal LCD/LED TV remote controller. Comprehensive control at different levels need, it can control old or new TV, famous brand or un-famous brand TV, hearing aids, mobile phones for TV, commonly used function keys and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller. losing, damage, replacement, it will bring more convenient for your life.

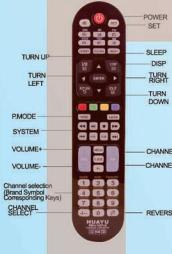

Battery Installation
 In accordance with the “+” “-” symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rechargeable), which is shown in the figure.

Battery Description

● The remote controller is a low-power consumption product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.

● Please do not put old and new batteries together or different types of batteries together in case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries.


● You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

Methods for setting remote controller:


This remote controller has the following methods for setup, you can choose any of them.

A. Inputting code:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.
 2. Press and hold the “SET” button for about 6 seconds, till the indicator lamp lights, then release the button, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release “SET” button at once, set finished.

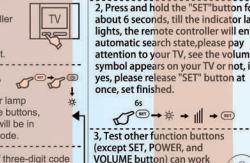

3. Turn on your TV set, then input each digit of the code one by one, the indicator lamp will flash one time, when the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.

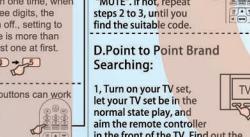

4. Test other function buttons can work well or not, such as “MUTE”, if not, repeat steps 2 to 3, until you find the suitable code.




B. Manually searching for the code:
 1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



2. Press “SET” button, then press “POWER” button, till the indicator lamp lights, then release the button, the remote

C. Automatically searching code:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.
 2. Press and hold the “SET” button for about 6 seconds, till the indicator lamp lights, then release the button, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release “SET” button at once, set finished.

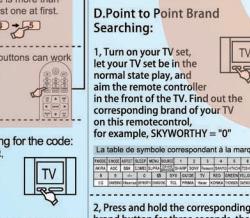

3. Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as “MUTE”, if not, repeat steps 2 to 3, until you find the suitable code.



E. Restore factory Settings

Press “SET” button, then press “0”, release the button, the indicator will flash two times, the remote controller restore factory Settings

Russian

А.Поиск нужной марки телевизора с помощью ввода кода брунчика



 
Б. Одновременно нажмите кнопки “SET” и “POWER”, пока не загорится индикаторная лампочка.



В. Проверьте работу кнопок на ПДУ, проверяя другие функции, кроме “SET”, “POWER”, “VOLUME”, если все нормально, то вы можете использовать этот код.



Г. Восстановление заводских настроек



C. Modeli с функцией автоматического поиска

 
1. Включите телевизор и направьте на него пульт.




2. Удерживайте нажатой кнопку “SET”, пока не загорится индикаторная лампочка.



3. Проверьте работу кнопок на ПДУ, проверяя другие функции, кроме “SET”, “POWER”, “VOLUME”, если все нормально, то вы можете использовать этот код.



 4. Восстановление заводских настроек



D. Mode de búsqueda de punto a punto

3. Ingresar primer conjunto de código de tres dígitos, cada vez que un dígito es la entrada, la luz indicadora parpadea una vez, después que todos los 3 dígitos has ingresado, la luz de indicador estará apagada, si el código es más de un conjunto, por favor ingrese el siguiente.



4. prueba si otros botones de función podían funcionar bien, como el botón de volumen (muted), si no, repita los pasos 2 hasta que encuentre un conjunto de código adecuado.



5. La búsqueda manual del código

 


6. Encender el televisor , apunte el control remoto hacia televisor.



E. Mode de búsqueda de punto a punto


1. Encender el televisor , apunte el mando a distancia a través de la marca correspondiente de TV, y luego presione el botón “SET”.




2. pulsada botón de símbolo de marco correspondiente durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadea, si el código es correcto, la luz de indicación se apaga inmediatamente, si no, repita el procedimiento.



 3. Presiona el botón de volumen una vez y luego presiona el botón “SET”, si el símbolo de volumen aparece en la pantalla de TV, se no se produce tal símbolo, repita el procedimiento.



 4. Después de que el símbolo de volumen aparece, prueba otro botón de función, como el ajuste (SET), POWER, VOLUME, si bien el trabajo, si el indicador de volumen aparece, no lo que significa que la configuración se ha terminado.



F. Restaurar los ajustes de fábrica

Pulse el botón “SET”, después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica



When you have any problems when you set or use this remote controller, please try to do as follow:

• When you sell this remote controller, please do according to the steps of the method “Inputting code”, if it can't control your device.

• Please input other codes according to steps:

• If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, to reset from step 1.

• If you use the method “Manually searching for the code”, because the code may be too much, you need to wait patiently



Technical parameters

• Remote Controlling Distance: About 8 meters (varies by different types)

• Battery Type: two pieces of AAA Batteries

• After-Sales Service

If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would like to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controller which have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product.

The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

