


HUAYU®English
RM-L1195+X
**Instruction for UNIVERSAL
LCD/LED TV REMOTE
CONTROLLER**

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

Introduction:
RM-L1195+X is the newest universal LCD/LED TV remote controller. Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.

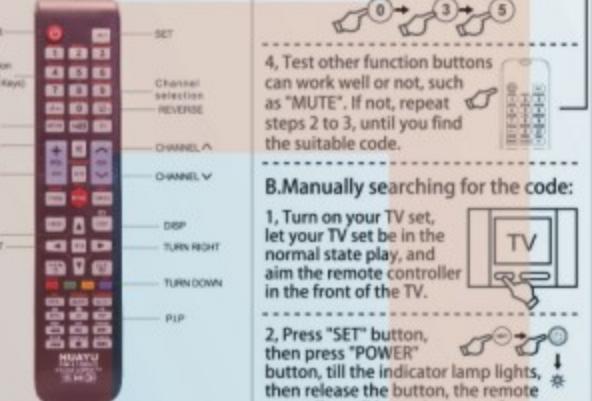

Battery Installation
In accordance with the “+,-” symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rechargeable), which is shown in the figure.



Battery Description
• The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.
• Please do not put old and new batteries or different types of batteries together.
• In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned.

• You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

Methods for setting remote controller:

This remote controller has the following methods for setup, you can choose any of them.

A.Inputting code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

Find the three digits code from the code list.

2, Press “SET” button, then press “POWER” button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.

3, Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.

4, Test other function buttons can work well or not, such as “MUTE”. If not, repeat steps 2 to 3, until you find the suitable code.

B.Manually searching for the code:
1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.


2, Press “SET” button, then press “POWER” button, till the indicator lamp lights, then release the button, the remote controller will be in the state of Manually searching for the code.

3, Press the “VOLUME+” button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.

4, Till the volume symbol appears on your TV, test other function buttons(except SET, POWER, and VOLUME button) can work well or not, such as “MUTE”. If not, repeat steps 2 to 3, until you find the suitable code.

C.Automatically searching code:


1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

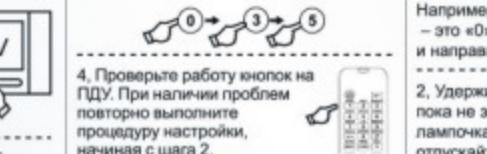

4, Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

В. Способ ручного поиска кода:


1. Включите телевизор и направьте на него пульт.

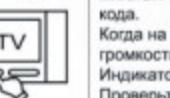

2. Одновременно нажимайте кнопки “SET” и “POWER”, пока не загорится индикаторная лампочка. Тогда реле, на этот раз в состоянии ручного поиска.

3. Нажмите кнопку “громкость +”, затем освободите её, когда появится символ громкости, при каждом нажатии индикатор мигает один раз, если не появится символ громкости, повторите операцию.

D.Point to Point Brand Searching:
1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SKYWORTHY = “0”

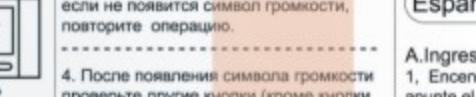

4. После появления символа громкости проверьте другие кнопки (кроме кнопки настройки, кнопки питания, кнопки громкости). Если другие функции работают, нажмите кнопку “настройки”, индикатор настройки гаснет, настройка выполнена.


**E.Restore factory Settings**

Press “SET” button, then press “0”, release the button, the indicator will flash two times, the remote controller restore factory Settings



F.С. Модели с функцией автоматического поиска

1, Включите телевизор и направьте на него пульт.

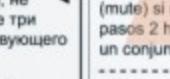


2, Удерживайте нажатой кнопку “SET”, пока не загорится индикаторная лампочка. Индикаторная лампочка начнёт мигать.

Пульт активизировал функцию автоматического поиска. Внимательно смотрите на экран телевизора, не отпуская кнопку “SET”. Введите три первых цифры кода, соответствующего модели телевизора.



3. Проверьте работу кнопок на ПДУ(установите кнопку питания, клавиши регулировки громкости, кроме).

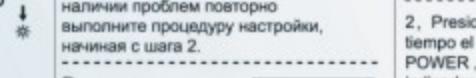

4. Введите три первых цифры кода, соответствующего модели телевизора.



Например, для SKYWORTHY – это «0». Включите телевизор и направьте на него пульт.

3, прайсите el ботон de volumen + una vez y luego suéltelo, ver si el símbolo de volumen aparece en la pantalla de TV, si no se produce tal símbolo, repita el procedimiento.

4, Después de que el símbolo de volumen aparece, prueba otro botón defunción (excepto el ajuste(SET), POWER, VOLUME), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

Warm Tips
If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of the method “inputting code”. If it can't control your device, Please input the other codes according to sequence.

- If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.

- when you use the method “Manually searching for the code”, because the codes are too much, you need to wait patiently

E.Restaurar los ajustes de fábrica

Pulse el botón “SET”, después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

Warm Tips
If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of the method “inputting code”. If it can't control your device, Please input the other codes according to sequence.

- If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.

- when you use the method “Manually searching for the code”, because the codes are too much, you need to wait patiently

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)

- Battery Type: two pieces of AAA Batteries

If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product. The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.




B0063897

HUAYU® RM-L1195+X

031	032	033	034	035	036	037	038	039	040	041	042	043	046	047	048	049	050	051	052	053	054	055	056	057	058	059	060	061	062	
063	066	067	068	069	070	071	073	074	079	080	081	082	083	084	085	086	087	088	089	090	091	092	093	094	095	096	097	098	099	
100	101	102	103	104	105	106	107	108	109	110	112	113	114	115	116	117	120	121	122	123	124	125	126	127	130	131	132	133	134	135

 HUAYU® RM-L1195+X

136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166			
																																	
HOB331 AKAI A4001032	HOB353 KM1128	HOB368 SS S6 S7 SB S9	LCD-2318	HOD142 HOD142	HOD148 VT-L9A11	HSR553 CYFROWY POLSAT	HSR585 IPM PLATFORM	Singer LCD TV 901-7650- 31SG1G	LCD-TV FU-1	LCT 01	LCT 02	148 148	HOB393 1253	12-17-2011_001	AOC-01	AOC-02	BENQ-01	BENQ-02	BENQ-03	BENQ-04	BENQ-05	VIZIO	NEC RP-42L1	SANYO JXPYR	ROLSEN RL-32L700U	POLYTRON B1f579	SAM_2446	SAM_2443	SAM_2457	lcd tv			
167	168	169	170	171	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	370	371	372	373				
																																	
AKAI A3001012	AKAI CX-507	BBK EN-31907	CHANGHONG GHK-4421A	E-RCU-015	BBK_EN-31907	Benq	china	EcoStar 2	HCH067- CHANGHONG GHK-4421A	Heir 2	HOB477 AKAI CX-507	HOB478 E-RCU-015	HOB479 AKAI A3001012	HOB484 Akai LTA -15A15M	HOB489 MISTERY LCD LED TV NEW	HOB490 Polar HTR -D18A	HOB491 Polar 55 LTV6002	Orient	PROTON 2	POLYTRON EN-31618P BTE878	HOB864 SNOWA T202-1	HOB455 ELECTRON T-81100	HOB457 RL-32L700U 3D	HOB464 BRAVIS LED2868 HQ	HOB465 DIGITAL DLE-4011	HOB46 LUXEON LED3213 HQ	ORION EP 22 LCD2623	HOB493 HAIER	HOB494 SUPRA				
374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	396	397	398	399	400	401	402	403	405	406	407	408	409	410		
																																	
HOB498 SHOWNIC	LEA-19V07P	IZUMI	81F579	ORION OR-LCD2	FUSION RC21b	SUPRA RC6w	SUPRA RC8b	SUPRA RC10w	SUPRA RC18b	RC-LEM100	BBK RC-LEM101	BBK RC-LED100	IZUMI TL26H211B	JAC	SKY LINE	TRUMAN	union tech	ATLAS HD100	HO8688 ATLSS HD-2005	KK-Y331J	KK-Y331J	HD LED100	GBTY ONGOV59	XY-B02E	LCD TV PHONAR	PHONAR LED TV	DAWA MV	iDEA	iDEA	iDEA	iDEA	iDEA	iDEA

HUAYU® RM-L1195+X		411	412	413	414	415	416	417	418	419	420	421	422	423	424	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441																																
	IDEA		IDEA		IDEA		AOC-02		DEX LT-2220		ORION LED2643		Akai SLP-006P		Fusion FLTV 22H11		Fusion FLTV 32H17		FUSION RC15b		Shivaki K77		Supra TV-DVD		RC-GK22G1		H-LCD3210		LED321LC		SKYPRIME HD		SUPRA RC21b-1219		ORION LCD		TC1860F1-R5		JH-11370		LED-851		RC-D3		YC-53		STV-22LEDS		LED-EH4720BF		DNS M28AM8		051D RED		33585								
	RC33729		HOBB42		34090		34091		RC31277		Fusion RC25b		RCF23b		RC-E23		AKI LCD AK61		AKI LCD AK66		AKI LCD AK68		AKI-OND IGO LCD		ONIDA LCD		ONIDA LCD ON87		051D BLACK		SNOWA 51163		BLAUPUNKT		J-1274		MERTER 33186		BRAVIS LED-1615		Marshal ME-2409		ONIDA LCD1		Akai HOF08J001		Polar 94 LTV6004		AN-LT3222 AN-LT2416		FUSION HY-079		SATURN LED40FHD500U		DEXP 16A3000		RUBIN RB -28D7T2C		DNS S19ASL1		RM-NST60		RM-SK9