

245*365

正

反

正

反

HUAYU®

Instruction for UNIVERSAL LCD/LED TV REMOTE CONTROLLER

000	002	003	004	005	006	010					
AOC AOC	GENERAL LCD-831	GENERAL LCD-832	IZUMI TL19H405B	IZUMI 0152	EN 30303D	HOB301 MYSTERY KT697 6857					
011	012	013	014	015	016	017	018	019	020	021	
HOB117 AKIRA TC1860F1	HOB187 GK23J6-C15	HOB279 AKIRA LCT-15CHST	4-3-2010-002	BBK	BBK EN-31603B	HOB158 BBK LT1504	HOB332 BBK CAMERON	HOB380 RC-2465	HOB387 RC-2603	HVD208 BBK	
022	023	024	025	026	027	028	029	030	031	032	
HVD209 RC12529	HOB228 LCD 831	HOB283 SUPRA 46275TV-LC1594	HOB303 HYUNDAI 1587 RC1B	HOB303 SUPRA365 STV-LC1515	HOB327 Supra RC3b	HOB328 Supra RC3b	HOB409 SUPRA Y-72C2	HOB410 SUPRA RC6b	HOB411 SUPRA RC12	RC1F18 RC1B	
033	034	035	036	037	038	039	040	041	042	043	
SUPRA BD-212	SUPRA HOF12H126PD11	SUPRA RC1b	SUPRA RC5b	SUPRA RC5db	SUPRA RC13b	SUPRA RC-118-0B	SUPRA STV-LC2615ED	HOB168 SHIVAKI BT0451C	HOB231 SHIVAKI 02	ROLSEN ER-11607R	
046	047	048	049	050	051	052	053	054	055	056	057
HTC056 RC1994907-01	HTC058 RC198	HOB333 81E829	HOB304 81E503	HOB227 ORION	HOB252 OPENBOX-1253	HOB281 MYSTERY 5195	HOB282 MYSTERY 8151	HOB301 MYSTERY KT697 6857	HOB326 MTV-1914LW	MYSTERY LCD LED TV NEW	HSR499 HISION
058	059	060	061	062	063	066	067	068	069	070	071
HOB402 ISTAR	HOB403 ISTAR	HOB405 ISTAR	ER-31607	HOB438 ER-31607R-109#R	LCD-2277RC	HOB302 HYUNDAI 1587 RC1B H-LCD2002(GOVAIN0383)	HOB306 HYPONAI 1587 RC1B	HOB390 CH-2145	FUSION RC3b_1042	HOB198 FUNAI 48KEY	IR1628 FUNAI PC221

073	074	079	080	081	082	083	084	085	086	087	
ELENBERG Y27401	ELENBERG	BERICOM008	HOB189 HOB189	HOB264 RC-AC3-01	HOB273 HOB273	HOB373 EN-21662B	HOB223 RC-L-05	HOB225 RC-L-06	HOB108 ACH-P-2	HOB149 BERICOM006	
088	089	090	091	092	093	094	095	096	097	098	
HOB150 BERICOM007	HOB206 EL-41UA299	HOB329 T15E01MT	HOB230 H-LED32V6	HOB341 STV-LC1914W	HOB418 ZD-RC30	DMTECH DMTECH	HOB262 HOB262	HOB344 HOF45A1-2	HOB249 PARS	HOB292 HS02-2	
099	100	101	102	103	104	105	106	107	108	109	
HOB103 HOF-54B1.4	HOB339 G152138	HOB381 HOF12E148GPD5	HOB346 HOF10G705GPD9	SONIQ QT-112	SUNSTECH TL1970HD	HOB195 H-LCDVD2200	HOB196 HOB196	HOB314 SINGER LCDK26-108	HOB386 RM-611	HOB308 IR1492 SENCOR	
110	112	113	114	115	116	117	120	121	122	123	124
HOB310 HOB310	HOB342 STV-LC1985WL	HOB382 G1 HOF12B441GPD11	HOB394 HOF10B441GPD4011	NF039RD NF039RD	PC221 01	PC221 02	BC105B BC105B	daytron LCD TV	HOB358 RC-A03	RC A06	RC A10
125	126	127	130	131	132	133	134	135	136	137	138
TLCD 32HD-TELEFUNKEN	KAIIMY KAIIMY	acer acer	HOB162 BERICOM009	HOB187 GK23J6-C15	LCD-2699	HOB229 OPTICUM9600 TS20	HOB242 RC1994925	HOB253 SNOWA	HOB331 AKAI A4001032	HOB353 KM1128	HOB368 55 56 57 58 59
139	140	141	142	143	144	145	146	147	148	149	150
LCD-2318	HOD142 HOD142	HOD148 VT-L9A11	HSR553 CYFORPOLSAT	HSR585 IPM PLATFORM	Singer LCD TV 901-7650-315G1G	LCD TV FU-1	LCT 01	LCT 02	148 148	HOB393 1253	12-17-2011_001 B0063715

151	152	153	154	155	156	157	158	159	160	161	162	163
AOC-01	AOC-02	BENQ-01	BENQ-02	BENQ-03	BENQ-04	BENQ-05	VIZIO	NEC RP-42L1	SANYO JXPYR	ROLSEN RL-32L700U	POLYTRON 81F579	SAM_2446
164	165	166	167	168	169	170	171	348	349	350	351	352
SAM_2443	SAM_2457	lcd tv	AKAI A3001012	AKAI CX-507	BBK EN-31907	CHANGHONG GHK-4421A	E-RCU-015	BBK-EN-31907	Benq	china	EcoStar 2	HCH967-CHANGHONG GHK-4421A
353	354	355	356	357	358	359	360	361	362	363	364	
Haier	HOB477 AKAI CX-507	HOB478 E-RCU-015	HOB479 AKAI A3001012	HOB484 AKAI LTA-15A15M	MEYERBYE LCD LED TV NEW	Polar HTR-D18A	HOB490 Polar 55LTV6002	Orient	PROTON 2	POLYTRON EN31618P 81E878	HOB864 SNOWA T202-1	
365	366	367	368	370	371	372	373	374	375	376	377	
HOB485 ELECTRON T-81100	HOB457 RL-32L700U 3D	HOB464 BRAVIS LED2868 HQ	DIGITAL DLE-4011	HOB466 LUXEON LED3213 HQ	ORION EP 22 LCD2623	HOB493 HAIR	HOB494 SUPRA	HOB498 SHOWNIC	LEA-19V07P	IZUMI	81F579	
378	379	380	381	382	383	384	385	386	387	388	389	390
ORION ORL CDZ	FUSION RC21b	SUPRA RC3w	SUPRA RC2b	SUPRA RC1w	SUPRA RC1b	RCLEM100	BBK RC-LEM101	BBK RC-LED100	IZUMI TL2B218	JAC	SKY LINE	TRUMAN
391	396	397	398	399	400	401	402	403	405	406	407	
union tech	ATLAS HD100	HOB588 ATLSH HD-2005	KK-Y331J	KK-Y331J	HD LED100	GBTY ONGOV59	XY-B02E	LCD TV PHNCR	PHONAR LED TV	DAWA MV	IDEA	

408	409	410	411	412	413	414	415	416	417	418	419	
IDEA	IDEA	IDEA	IDEA	IDEA	IDEA	IDEA	AOC-02	DEX LT-2220	ORION LED2643	AKAI SP-006P	Fusion FLT TV 22H11	
420	421	422	423	424	426	427	428	429	430	431	432	
Fusion FLT TV 32H17	FUSION RC15b	Shivaki K77	Shivaki K78	Supra TV-DVD	RC-GK22G1	H-LCD3210	LED321LC	SKYPRIME HD	SUPRA RC21b-1219	ORION LCD	TC1860F1-R5	
433	434	435	436	437	438	439	440	441	442	442	442	
JH-11370	LED-851	RC-D3	YC-53	STV-22LED5	LED-EH4720BF	DNS M28AM8	051D RED	33585	RC33729	HOB842	34090 34091	
443	444	445	446	449	450	451	452	453	454	516	520	528
RC31277	Fusion RC25b	RCF23b	RC-E23	AKI AK61	AKI LCD AK66	AKI-LCD AK68	AKI-OND IGO LCD	ONIDA LCD	ONIDA LCD ON87	051D BLACK	SNOWA51163	BLAUPUNKT
531	540	542	500	544	545	546	547	548	549	540	540	550
J-1274	MERTER3186	BRAVIS LED-1615	STV-42LED5	ONIDA LCD1	AKAI HOF8J001	Polar 94TV6004	AN-LT3222 AN-LT3225 AN-LT2416	FUSION HY-079	SATURN LED40FH090U	DEEP 16A3000	RUBIN RB-3807TC	DNS 519ASL1
551	533											
RM-NST60	RM-SK09											

 
HUAYU®

Instruction for UNIVERSAL LCD/LED TV REMOTE CONTROLLER

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

Introduction:

RM-L1195+8 is the newest universal LCD/LED TV remote controller. Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu built all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.

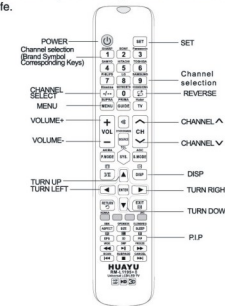

Battery Installation
In accordance with the "+, -" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rationed), which is shown in the figure.

Battery Description

- The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.
- Please do not put old and new batteries or different types of batteries together.
- In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries.
- You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

Methods for setting remote controller:

This remote controller has the following methods for setup, you can choose any of them.

A. Inputting code:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.



2. Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.



3. Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting is be finished. If the code is more than one set, please use first one at first.



4. Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



B. Manually searching for the code:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



2. Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the button, the remote controller will be in the state of Manually searching for the code.



3. Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.



4. Till the volume symbol appears on your TV, test other function buttons(except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

 


C. Automatically searching code:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



2. Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.



3. Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



D. Point to Point Brand Searching:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SKYWORTHY = "0".



La table de symbole correspondant à la marque

MARKA	UNIQUE	ASPECT	SLEEP	MENU	SOURCE	1	2	3	4	5	6	7	8	9	0
AKAI	ACC	BBK	CEBORG	DELTA	ELSA	ENHAP	EPSON	FRANCO	GENIUS	HAICHA	HERNANDEZ	INNOVA	LENOVO	LENOVO	LENOVO
LG	SHARP	SHARP	SHARP	SHARP	SHARP	SHARP	SHARP	SHARP	SHARP	SHARP	SHARP	SHARP	SHARP	SHARP	SHARP
LO	SAMSUNG	SAMSUNG	SAMSUNG	SAMSUNG	SAMSUNG	SAMSUNG	SAMSUNG	SAMSUNG	SAMSUNG	SAMSUNG	SAMSUNG	SAMSUNG	SAMSUNG	SAMSUNG	SAMSUNG

2. Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.



E. Restore factory Settings

Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

A. Поиск нужной марки телевизора с помощью ввода кода вручную

 
1. Включите телевизор и в первом коде найдите тот, который соответствует марке Вашего телевизора.



2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка.



3. Введите три первых цифры кода, соответствующего модели телевизора, после ввода кода индикатор перестанет гореть, установка завершена



B. Способ ручного кода:

1. Включите телевизор и направьте на него пульт.



2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка. Тогда релиз, на этот раз в состоянии ручного поиска.



3. Нажмите кнопку "громкость+", затем освободите её, когда появится символ громкости, при каждом нажатии индикатор мигает один раз, если не появится символ громкости, повторите операцию.



4. После появления символа громкости проверьте другие кнопки (кроме кнопки настройки, кнопки питания, кнопки громкости). Если другие функции нормальны, нажмите кнопку "настройки", индикатор настройки гасит, настройка выполнена.



C. Модели с функцией автоматического поиска

1. Включите телевизор и направьте на него пульт.



2. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. Индикаторная лампочка начнёт мигать. Пульт активизирует функцию автоматического поиска. Вы внимательно смотрите на экран телевизора, не отпуская кнопку "SET". Введите три первых цифры кода, соответствующего модели телевизора.



3. Проверьте работу кнопок на ПДУ (Установите кнопку, кнопка питания, клавиши регулировки громкости, кроме). При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.



D. 1. Найдите код, соответствующий модели Вашего телевизора. Например, для SKYWORTHY – это «0». Включите телевизор и направьте на него пульт.



2. Удерживайте нажатой кнопку кода, пока не загорится индикаторная лампочка (около 3 секунд). Не отпускайте кнопку, и индикаторная лампочка начнёт мигать. Активизируется режим поиска кода. Когда на экране появится символ громкости, отпустите кнопку кода. Индикаторная лампочка погаснет.



3. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2



A. Ingresar el código

1. Encender el televisor, apunte el control remoto hacia el televisor, luego encontrar el correspondiente código de tres dígitos de la marca correspondiente en la tabla de códigos



2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicadora se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código



3. Ingresar primer conjunto de código de tres dígitos, cada vez que un dígito es la entrada, la luz de indicación parpadea una vez, después que todos los 3 dígitos ha ingresado, la luz de indicador estaría apagado, si el código es más de un conjunto, por favor, utilice la primera.



4. prueba si otros botones de función podría funcionar bien, como el botón de silencio (mute) si no, repita los pasos 2 hasta que encuentre un conjunto de código adecuado.



B. La búsqueda manual del código

1. Encender el televisor, apunte el control remoto hacia televisor.



2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicadora se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código



3. presione el botón de volumen + una vez y luego suéltelo. ver si el símbolo de volumen aparece en la pantalla de tv, si no se produce tal símbolo, repita el procedimiento.



4. Después de que el símbolo de volumen aparece, pruebe otro botón de función (excepto el ajuste(SET), POWER, VULUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.



C. La búsqueda automatica del códigos.

1. Encender el televisor, apunte el control remoto hacia televisor.



2 Presione y mantenga el botón de ajuste(SET)durante unos 6 segundos hasta la luz indicadora se enciende. Ver si el símbolo de volumen aparece en la pantalla, si es así, suelta de inmediato el botón SET para detener la búsqueda automática.



3. pruebe otro botón de función (excepto el ajuste(SET), POWER, VULUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado, si no, repita los pasos 2 hasta que encuentre el código adecuado.



D. Mode de búsqueda de punto a punto

1. Encender el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SKYWORTHY con su símbolo 0.



2. pulsada botón de símbolo de marco correspondiente, durante unos 3 segundos no suelte el botón hasta que la luz indicadora parpadee. Cuando aparece el símbolo de volumen en la pantalla de TV, suelte inmediatamente el botón, y la luz de indicador apagará. Probar si el control remoto funciona bien, si no, repita el procedimiento.



E. Restaurar los ajustes de fábrica

Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

Warm Tips

- If you have any problems when you set or use this remote controller, please try to do as follow:
 - When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.
 - If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
 - when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters

- Remote Control Distance: About 8 meters (varies by different types)
 - Battery Type: two pieces of AAA Batteries After-sales Service
- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you our best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product. The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.