



HUAYU[®]

RC-820J+E



RC-820J+E



Нажмите кнопку "POWER" и "SETUP" индикатор горит, введите код пульта дистанционного управления, индикатор гаснет, установка завершена.

"Power+setup" LED lighting, enter the remote control code, lighting off and setting success.

When setup a particular model remote control function after the success, only a few buttons at the remote control available is normal