


RM-L1120+12
Instruction for UNIVERSAL
LCD/LED TV REMOTE
CONTROLLER

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

Introduction:
 RM-L1120+12 is the newest universal LCD/LED TV remote controller. Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.

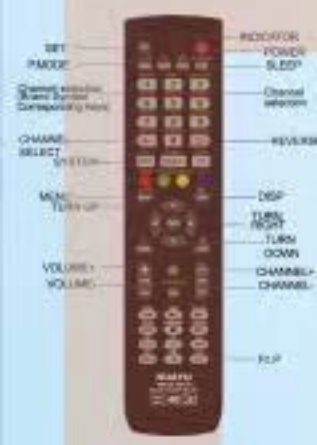

Battery Installation
 In accordance with the "+, -" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rechargeable), which is shown in the figure.



Battery Description
 The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.
 Please do not put old and new batteries or different types of batteries together.
 In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries.
 You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

Methods for setting remote controller:
 This remote controller has the following methods for setup, you can choose any of them.

A. Inputting code:
 1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

2. Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.

3. Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.

 
4. Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

B. Manually searching for the code:
 1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2. Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the button, the remote

controller will be in the state of Manually searching for the code.
 3. Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.

4. Till the volume symbol appears on your TV, test other function buttons(except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



C. Automatically searching code:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2. Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.

3. Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

D. Point to Point Brand Searching:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remotecontrol, for example, SKYWORTHY = "0"

La table de symbole correspondants à la marque

0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9

2. Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.

E. Restore factory Settings
 Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

Русский

A. Поиск нужной марки телевизора с помощью ввода кода вручную

1. Включите телевизор и в перечне кодов найдите тот, который соответствует марки Вашего телевизора.

2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка.

3. Введите три первых цифры кода, соответствующего модели телевизора, после ввода кода индикатор перестанет гореть, установка завершена.

4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

B. Способ ручного поиска кода:

1. Включите телевизор и направьте на него пульт.

2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка. Тогда реле, на этот раз в состоянии ручного поиска.

3. Назовите кнопку "громкость+", затем соскочите ей, когда появится символ громкости, при каждом нажатии индикатор мигает один раз, если не появится символ громкости, повторите операцию.

4. После появления символа громкости проверьте другие кнопки (кроме кнопки настройки, кнопки питания, кнопки громкости). Если другие функции нормальны, нажмите кнопку "настройка", индикатор настройки гасит, настройка выполнена.

C. Модели с функцией автоматического поиска

1. Включите телевизор и направьте на него пульт.

2. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. Индикаторная лампочка начнет мигать. Пульт активировал функцию автоматического поиска. Внимательно смотрите на экран телевизора, не отпуская кнопку "SET". Введите три первых цифры кода, соответствующего модели телевизора.

3. Проверьте работу кнопок на ПДУ(установите кнопку, кнопка питания, клавиша регулировки громкости, кроме). При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

D.

1. Найдите код, соответствующий модели вашего телевизора. Например, для SKYWORTHY - это «0».

2. Удерживайте нажатой кнопку кода, пока не загорится индикаторная лампочка (около 3 секунд). Не отпуская кнопку, и индикаторная лампочка начнет мигать. Активировался режим поиска кода. Когда на экране появится символ громкости, отпустите кнопку кода. Индикаторная лампочка погаснет. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

C. La búsqueda automática del códigos.

1. Encender el televisor, apunte el control remoto hacia televisor.

2. Presione y mantenga el botón de ajuste[SET]durante unos 6 segundos hasta la luz indicador se enciende. Ver si el simbolo de volumen aparece en la pantalla, si es así, suelte de inmediato el botón SET para detener la búsqueda automática.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se

A. Ingressa el código

1. Encender el televisor, apunte el control remoto hacia televisor. luego encontrar el correspondiente código de tres dígitos de la marca correspondiente en la tabla de códigos

2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código

3. Ingresar primer conjunto de código de tres dígitos, cada vez que un dígito es la entrada, la luz de indicación parpadeara una vez, después que todos los 3 dígitos ha ingresado, la luz de indicador estaría apagado, si el código es más de un conjunto, por favor, utilice la primera.

4. prueba si otros botones de función podría funcionar bien, como el botón de silencio (mute) si no, repita los pasos 2 hasta que encuentre un conjunto de código adecuado.

B. La búsqueda manual del código

1. Encender el televisor, apunte el control remoto hacia televisor.

2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código

3. presione el botón de volumen + una vez y luego sútelolo, ver si el simbolo de volumen aparece en la pantalla de TV, si no se produce tal simbolo, repita el procedimiento.

4. Después de que el simbolo de volumen aparece, pruebe otro botón de función (excepto el ajuste(SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

C. La búsqueda automática del códigos.

1. Encender el televisor, apunte el control remoto hacia televisor.

2. Presione y mantenga el botón de ajuste[SET]durante unos 6 segundos hasta la luz indicador se enciende. Ver si el simbolo de volumen aparece en la pantalla, si es así, suelte de inmediato el botón SET para detener la búsqueda automática.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se

apagará, lo que significa que la configuración se ha terminado. si no, repita los pasos 2 hasta que encuentre el código adecuado.

D. Mode de búsqueda de punto a punto

1. Encender el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SKYWORTHY con su simbolo 0.

2. pulsada botón de simbolo de marca correspondiente, durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadea. Cuando aparece el simbolo de volumen en la pantalla de TV, suelta inmediatamente el botón, y la luz de indicador apagará. Probar si el control remoto funciona bien, si no, repita el procedimientos.

E. Restaurar los ajustes de fábrica

Pulse el botón "SET", después pulse el número 0. la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

Warm Tips

If you have any problems when you set or use this remote controller, please try to do as follow:
 • When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.
 • If you have input wrong codes, but the indicator still light, you just need to input the correct code. if the indicator turn off, you need to reset from step 1.
 • when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters

• Remote Controlling Distance: About 8 meters (varies by different types)
 • Battery Type: two pieces of AAA Batteries
After-sales Service
 If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.
 To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product.
 The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

000 AOC AOC	002 GENERAL LCD-831	003 GENERAL LCD-832	004 GJMI TL1944058	005 GZMI 0152	006 EN 303030	010 HOB301 METERPOWER	011 HOB117 MIRA TC186F1	012 HOB187 GK2336-C15
013 HOB179 MIRA TC1504F	014 4-3-2010-002	015 BBK BBK	016 BBK EN-31603R	017 HOB128 BBK LT1504	018 BBK CAMERON	019 HOB380 RC2445	020 HOB387 RC-2603	021 HYD308 BBK
022 HYD289 RC1529	023 HOB228 LCD 831	024 HOB283 SUPRA 46275TV-LC1504	025 HOB302 HYUNDAI 1587 RC118	026 HOB303 SUPRA 306 STV-LC1515	027 HOB327 Supra RC3b	028 HOB328 Supra RCF3b	029 HOB409 SUPRA Y-72C2	030 HOB410 SUPRA RC6b





