

170*693mm

第一张正面

 
HUAYU®

English

RM-L1130+12 Instruction for UNIVERSAL LCD/LED TV REMOTE CONTROLLER

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

Introduction:
RM-L1130+12 is the newest universal LCD/LED TV remote controller, Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.

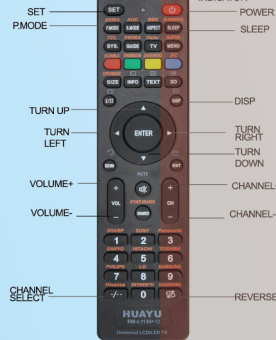

Battery Installation

In accordance with the "+,-" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rationed), which is shown in the figure.



Battery Description

- The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.
- Please do not put old and new batteries or different types of batteries together.
- In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries.
- You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

Methods for setting remote controller:

This remote controller has the following methods for setup , you can choose any of them.

A.Inputting code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.

3, Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off., setting to be finished. If the code is more than one set, please use first one at first.

4, Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

B.Manually searching for the code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the button, the remote

controller will be in the state of Manually searching for the code.

3, Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.

4, Till the volume symbol appears on your TV, test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

C.Automatically searching code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

2, Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.

3, Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

D.Point to Point Brand Searching:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SKYWORTHY = "0"

2, Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.

3s
0 → * → || → SET

E.Restore factory Settings
Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

Brand symbol table											
PMODE	LRMODE	ASPECT	SLEEP	MENU	SOURCE	1	2	3	4	5	6
AKIRA	ACC	BBK	ELNINGS	SUPRA	OTHER	SHARP	SONY	Panasonic	SANYO	HITACHI	TOSHIBA
8	9	-	LG	0	SS	SYS	GUIDE	TV	RED	GREEN	YELLOW
LG	SAMSUNG	Hieros	SINORTH	C-HAGONG	TCL	PRIMA	Haier	KONKA	THOMSON	DAEWOO	JVC

HUAYU®

RM-L1130+12

046



HTC056
RC1994907-01

047



HTC058
RC198

048



HOB333
81E829

049



HOB394
81E503

050



HOB227
ORION

051



HOB252
OPENBOX
-1253

052



HOB281
MYSTERY
5195

053



HOB282
MYSTERY
8151

054



HOB301
MYSTERY
KT6957 6857

055



HOB326
MTV-1914LW

056



MESTERY
LCD LED TV
NEW

057



HSR499
HIVION

058



HOB402
iSTAR

059



HOB403
iSTAR

060



HOB405
iSTAR

061



ER-31607

062



HOB438
ER-31607R
-1098#

063



LCD-2277RC

066



HOB302
HYUNDAI 1587
RCF1B

067



HOB376
H-LCD2202GCO
VA1028SJ

068



HOB390
CH-2145

069



FUSION
RC3b_1042

070



HOB198
FUNAI 48KEY

071



IR1628
FUNAIPC221

073



HOB018
ELENBERG
Y27401

074



HOB354
ELENBERG

079



HOB151
BERICOM008

080



HOB189
HOB189

081



HOB264
RC-A3-01

082



HOB273
HOB273

083



HOB373
EN-21662B

084



HOB223
RC-L-05

085



HOB225
RC-L-06

086



HOB108
ACH-P-2

087



HOB149
BERICOM006

088



HOB150
BERICOM007

089



HOB206
EL-41UA299

090



HOB329
T15E01MT

091



HOB330
H-LED32V6

092



HOB341
STV-LC1914W

093



HOB418
ZD-RC30

094



DMTECH
DMTECH

095



HOB262
HOB262

096



HOB344
HOF45A1-2

097



HOB249
PARS

098



HOB292
H502-2

099



HOB013
HOF-54B1.4

100



HOB339
GI S2138

101



HOB381
HOF12E
148GPD5

102



HOB346
HOF10G
705GPD9

103



SONIQ
QT-112

104



SUNSTECH
TL1970HD

105



HOB195
H-LCDVD2200

106



HOB196
HOB196

107



HOB314
Singer LCDKZG
-108

108



HOB386
RM-611

109



HOB308
IR1492 SENCOR

110



HOB310
HOB310

112



HOB342
STV
-LC1985WL

113



HOB382
GI HOF12B441
GPD11

114



HOB220-NF021RD
NF028RD-NF031RD
-NF036RD 4IN1

115



NF039RD
NF039RD

116



PC221
01

117



PC221
02

120



BC10SB
BC10SB

121



daytron
LCD TV

122



HOB358
RC-A03

123



RC
A06

124



RC
A10

125



TLCD
32HD-
TELEFUNKEN

126



KAIMY
KAIMY

127



acer
acer

130



HOB162
BERICOM009

131



HOB187
GK23J6-C15

132



LCD-2699

133



HOB229
OPTICUM9600
TS20

134



HOB242
RC1994925

135



HOB253
SNOWA

HUAYU®

RM-L1130+12

136



HOB331
AKAI
A4001032

137



HOB353
KM1128

138



HOB368
S5 S6 S7
S8 S9

139



LCD-2318

140



HOD142
HOD142

141



HOD148
VT-L9A11

142



HSR553
CYFROWY
POLSAT

143



HSR585
IPM PLATFORM

144



Singer LCD TV
901-7650-
31SG1G

145



LCD
TV FU-1

146



LCT
01

147



LCT
02

148



148
148

149



HOB393
1253

150



12-17-2011_001

151



AOC-01

152



AOC-02

153



BENQ-01

154



BENQ-02

155



BENQ-03

156



BENQ-04

157



BENQ-05

158



VIZIO

159



NEC
RP-42L1

160



SANYO
JXPYR

161



ROLSN
RL-82L700U

162



POLYTRON
81f579

163



SAM_2446

164



SAM_2443

165



SAM_2457

166



lcd tv

167



AKAI
A3001012

168



AKAI
CX-507

169



BBK
EN-31907

170



CHANGHONG
GHK-4421A

171



E-RCU-015

348



BBK_EN-31907

349



Benq

350



china

351



EcoStar 2

352



HOB067-
CHANGHONG
GHK-4421A

353



Heir 2

354



HOB477
AKAI CX-507

355



HOB478
E-RCU-015

356



HOB479
AKAI A3001012

357



HOB484
Akai LTA
-15A15M

358



HOB489
MESTERY LCD
LED TV NEW

359



HOB490
Polar HTR
-D18A

360



HOB491
Polar 55
LTV6002

361



Orient

362



PROTON 2

363



POLYTRON
EN-31618P
81E878

364



HOB864
SNOWA
T202-1

365



HOB455
ELECTRON
T-81100

366



HOB457
RL-32L700U
3D

367



HOB464
BRAVIS
LED2868 HQ

368



HOB465
DIGITAL
DLE-4011

370



HOB46
LUXEON
LED3213 HQ

371



ORION EP
22 LCD2623

372



HOB493
HAIER

373



HOB494
SUPRA

374



HOB498
SHOWNIC

375



LEA-19V07P

376



IZUMI

377



81F579

378



ORION
OR-LCD2

379



FUSION
RC21b

380



SUPRA RC6w

381



SUPRA RC8b

382



SUPRA
RC10w

383



SUPRA
RC18b

384



RC-LEM100

385



BBK
RC-LEM101

386



BBK
RC-LED100

387



IZUMI
TL26H211B

388



JAC

389



SKY LINE

390



TRUMAN

391



union tech

396



ATLAS HD100

397



HOB688
ATLSS
HD-200S

HUAYU®

RM-L1130+12

398



KK-Y331J

399



KK-Y331J

400



HD LED100

401



GBTY ONGOV59

402



XY-B02E

403



LCD TV PHONAR

405



PHONAR LED TV

406



 
DAWA MV

407



iDEA

408

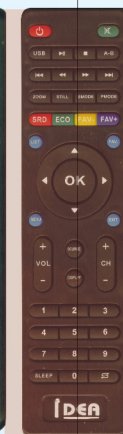

iDEA

409



iDEA

410



iDEA

411



iDEA

412



iDEA

413



iDEA

414



iDEA

415



AOC-02

416



DEX LT-2220

417



ORION LED2643

418



Akai SLP-006P

419



Fusion FLTV 22H11

420



Fusion FLTV 32H17

421



FUSION RC15b

422



Shivaki K77

423



Shivaki K78

424



Supra TV-DVD

426



RC-GK22G1

427



H-LCD3210

428



LED321LC

429



SKYPRIME HD

430



SUPRA RC21b-1219

431



ORION LCD

432



TC1860F1-RS

433



JH-11370

434



LED-851

435



RC-D3

436



YC-53

437



STV-22LED5

438



LED-EH4720BF

439



DNS M28AM8

440



051D RED

441



33585

442



RC3729

442



HOB842

442



34090

442



34091

443



RC31277

444



Fusion RC25b

445



RCF23b

446



RC-E23

449



AKI AK61

450



AKI LCD AK66

451



 
AKI LCD AK68

452



AKI-OND IGO LCD

453

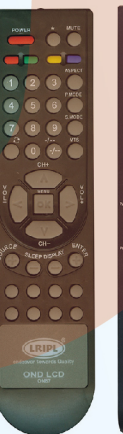

ONIDA LCD

454



ONIDA LCD ON87

516



051D BLACK

520



SNOWA 51163

528



BLAUPUNKT

531



J-1274

540



MERTER 33186

542



BRAVIS LED-1615

543



Marshal ME-2409

544



ONIDA LCD1

545



Akai HOF08J001

546



Polar 94 LTV6004

547



AN-LT3222 AN-LT3225 AN-LT2416

548



FUSION HY-079

549



SATURN LED40FHD500U

540



DEXP 16A3000

540



RUBIN RB-28D772C

550



DNS S19ASL1

551



RM-NST60

533



RM-SK09

576



VESTEL LCD T1396

577



VESTEL LCD

578



HAIER HTR-A10

579



EN3V39H

580



VESTEL LCD T1560

581



MICROMAX

582



RECONNECT

583



YASIN

584

HISENSE

585

SANSUI