 


Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller will not lose its memory when you change batteries, no need to reset.

Introduction:
 RM-L1130+X PLUS is the newest universal LCD/LED TV remote controller. Comprehensive care at different levels need. It can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.

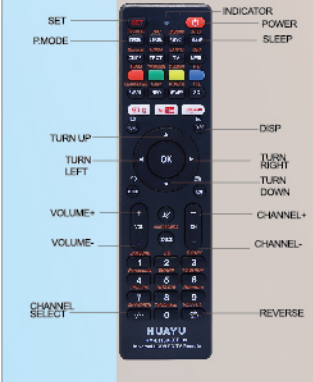

Battery Installation
 In accordance with the "+,-" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rationed), which is shown in the figure.



Battery Description
 ● The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.
 ● Please do not put old and new batteries or different types of batteries together.
 ● In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries.
 ● You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

Methods for setting remote controller:
 This remote controller has the following methods for setup, you can choose any of them.

 
A. Inputting code:
 1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.




2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.



3, Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.



 
4, Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



B. Manually searching for the code:
 1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



 2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the button, the remote controller will be in the state of Manually searching for the code.



3, Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV or not, if not, please repeat this procedure.



4, Till the volume symbol appears on your TV, test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

 


C. Automatically searching code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



2, Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.



3, Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

 


D. Point to Point Brand Searching:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, Telefunken = "0".



2, Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.




E. Restore factory Settings

Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

Brand symbol table

BRAND	SYMBOL	ASPECT	SLEEP	TEXT	TV	VIDEO	RED	GREEN
CHANGLO	JAC	SMART	STOP	OK	OK	OK	OK	OK
DELSON	DELSON	SMART	STOP	OK	OK	OK	OK	OK
ELSON	ELSON	SMART	STOP	OK	OK	OK	OK	OK
EVISON	EVISON	SMART	STOP	OK	OK	OK	OK	OK
SHARP	SHARP	SMART	STOP	OK	OK	OK	OK	OK

000	002	003	004	005	006	010	011	012	013	014	015	016	017	018	019	020	021	022	023	024	025	026	027	028	029	030	031	032	033	034	035	036	037	038	039
AOC AOC	GENERAL LCD-831	GENERAL LCD-832	IZUMI TL19H405B	IZUMI 0152	EN 30303D	HOB301 MYSTERY KT6957 6857	HOB117 AKIRA TC1860F1	HOB187 GK23J6-C15	HOB279 AKIRA LCT-15CHST	4-3-2010-002	BBK BBK	BBK EN-31603B	HOB158 BBK LT 1504	HOB332 BBK CAMERON	HOB380 RC2465	HOB387 RC-2603	HVD208 BBK	HVD209 RC1529	HOB228 LCD 831	HOB283 SUPRA 4627STV -LC1504	HOB302 HYUNDAI 1587 RCF1B	HOB303 SUPRA306 STV-LC1515	HOB327 Supra RC3b	HOB328 Supra RCF3b	HOB409 SUPRA Y-72C2	HOB410 SUPRA RC6b	HOB411 SUPRA RC12	RCF1B RCF1B	SUPRA BD-212	SUPRA HOF12H126 GPD11	SUPRA RC1b	SUPRA RC5b	SUPRA RC5db	SUPRA RC13b	SUPRA RC-118-0B
040	041	042	043	046	047	048	049	050	051	052	053	054	055	056	057	058	059	060	061	062	063	066	067	068	069	070	071	073	074	079	080	081	082		
SUPRA STV-LC2615ED	HOB168 SHIVAKI BT0451C	HOB231 SHIVAKI 02	ROLSEN ER-31607R	HTC056 RC1994907-01	HTC058 RC198	HOB333 81E829	HOB394 81E503	HOB227 ORION	HOB252 OPENBOX -1253	HOB281 MYSTERY 5195	HOB282 MYSTERY 8151	HOB301 MYSTERY KT6957 6857	HOB326 MTV-1914LW	MESTERY LCD LED TV NEW	HSR499 HIVION	HOB402 ISTAR	HOB403 ISTAR	HOB405 ISTAR	ER-31607	HOB438 ER-31607R -1098#	LCD-2277RC	HOB302 HYUNDAI 1587 RCF1B	HOB376 H-LCD2202GCO VA1028SJ	HOB390 CH-2145	FUSION RC3b_1042	HOB198 FUNAI 48KEY	IR1628 FUNAI PC221	HOB018 ELENBERG Y27401	HOB354 ELENBERG	HOB151 BERICOM008	HOB189 HOB189	HOB264 RC-A3-01	HOB273 HOB273		

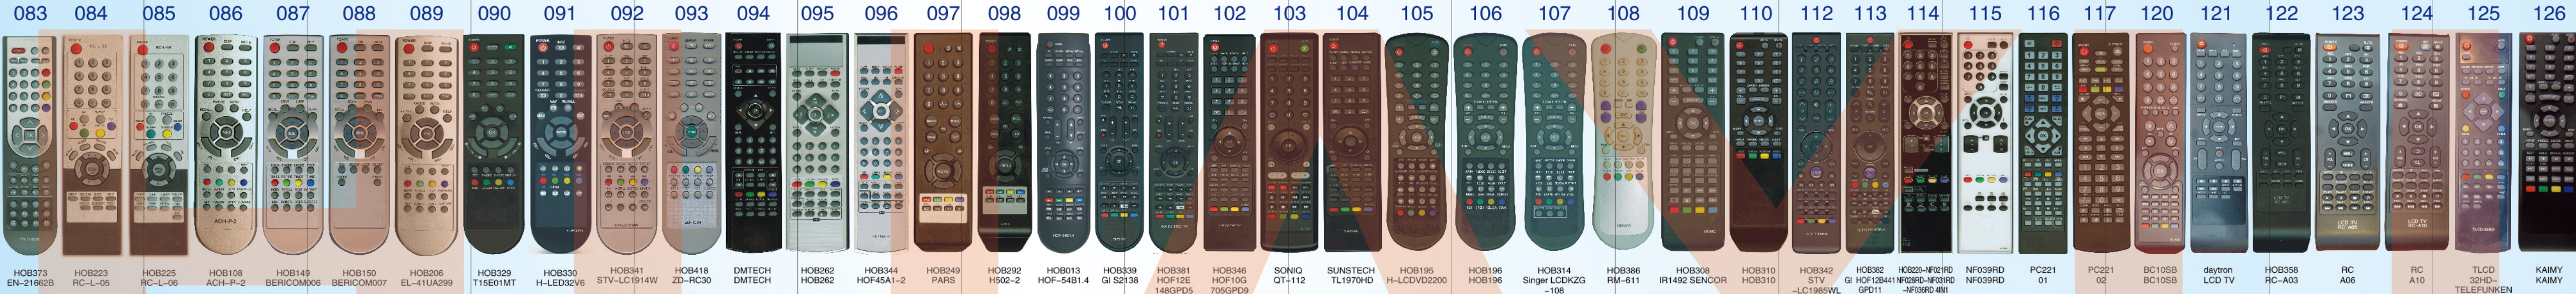 

HUAYU[®] RM-L1130+X PLUS



348 BBK_EN-31907 349 Benq 350 china 351 EcoStar 2 352 HCH067-CHANGHONG GHK-4421A 353 Heir 2 354 HOB477 AKAI CX-507 355 HOB478 E-RCU-015 356 HOB479 AKAI A300102 357 HOB484 Akai LTA-15A15M 358 HOB489 MESTERY LCD LED TV NEW 359 HOB490 Polar HTR-D18A 360 HOB491 Polar 55 LTV6002 361 Orient 362 PROTON 2 363 POLYTRON EN-31618P 81E878 364 HOB864 SNOWA T202-1 365 HOB455 ELECTRON T-81100 366 HOB457 RL-32L700U 3D 367 HOB464 BRAVIS LED2868 HQ 368 HOB465 DIGITAL DLE-4011 370 HOB46 LUXEON LED3213 HQ 371 ORION EP 22 LCD2623 372 HOB493 HAIER 373 HOB494 SUPRA 374 HOB498 SHOWNIC 375 LEA-19V07P 376 IZUMI 377 81F579 378 ORION OR-LCD2 379 FUSION RC21b 380 SUPRA RC6w 381 SUPRA RC8b 382 SUPRA RC10w 383 SUPRA RC18b 384 RC-LEM100 385 BBK RC-LEM101 386 BBK RC-LED100 387 IZUMI_TL26H211B 388 JAC 389 SKY LINE 390 TRUMAN 391 union tech



396 ATLAS HD100 397 HOB688 ATLSS HD-200S 398 KK-Y331J 399 KK-Y331J 400 HD LED100 401 GBTY ONGOV59 402 XY-B02E 403 LCD TV PHONAR 404 PHONAR LED TV 405 DAWA MV 406 IDEA 407 IDEA 408 IDEA 409 IDEA 410 IDEA 411 IDEA 412 IDEA 413 IDEA 414 IDEA 415 AOC-02 416 DEX LT-2220 417 ORION LED2643 418 Akai SLP-006P 419 Fusion FLT V 22H11 420 Fusion FLT V 32H17 421 FUSION RC15b 422 Shivaki K77 423 Shivaki K78 424 Supra TV-DVD 426 RC-GK22G1 427 H-LCD3210 428 LED321LC 429 SKYPRIME HD 430 SUPRA RC21b-1219 431 ORION LCD 432 TC1860F1-RS 433 JH-11370 434 LED-851 435 RC-D3 436 YC-53 437 STV-22LED5 438 LED-EH4720BF 439 DNS M28AM8

HUAYU[®] RM-L1130+X PLUS

