


HUAYU®

English

RM-L1195+12 Instruction for UNIVERSAL LCD/LED TV REMOTE CONTROLLER

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

Introduction: RM-L1195+12 is the newest universal LCD/LED TV remote controller, Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.

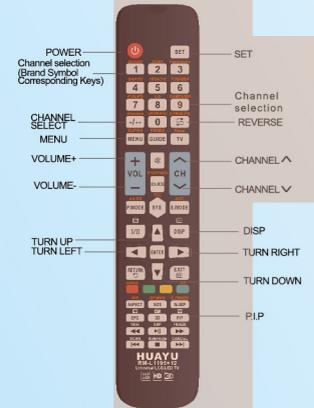

Battery Installation In accordance with the "+,-" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rationed), which is shown in the



Battery Description ●The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened. ●Please do not put old and new batteries or different types of batteries together. ●In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned

●You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a

Methods for setting remote controller: This remote controller has the following methods for setup , you can choose any of them.

A.Inputting code: 1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.

3, Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off., setting to be finished. If the code is more than one set, please use first one at first.

4, Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

B.Manually searching for the code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the button, the remote controller will be in the state of Manually searching for the code.

3, Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.

4, Till the volume symbol appears on your TV, test other function buttons(except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

C.Automatically searching code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2, Press and hold the "SET"button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state,please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.

3, Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

D.Point to Point Brand Searching: 1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SKYWORTHY = "0"

2, Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.

E.Restore factory Settings Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

Brand symbol table

Русский

A.Поиск нужной марки телевизора с помощью ввода кода вручную

1. Включите телевизор и в перечне кодов найдите тот, который соответствует марке Вашего телевизора.

2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка.

3. Введите три первых цифры кода, соответствующего модели телевизора. После ввода кода индикатор перестанет гореть, установка завершена

4, Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

B. Способ ручного поиска кода:

1. Включите телевизор и направьте на него пульт.

2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка. Тогда релиз, на этот раз в состоянии ручного поиска.

3. Нажмите кнопку "громкость +", затем освободите её, когда появится символ громкости, при каждом нажатии индикатор мигает один раз, если не появится символ громкости, повторите операцию.

4. После появления символа громкости проверьте другие кнопки (кроме кнопки настройки, кнопки питания, кнопки громкости). Если другие функции нормальные, нажмите кнопку "настройки", индикатор настройки гасит, настройка выполнена.

C. Модели с функцией автоматического поиска

1. Включите телевизор и направьте на него пульт.

2. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. Индикаторная лампочка начнёт мигать. Пульт активизировал функцию автоматического поиска. Внимательно смотрите на экран телевизора, не отпуская кнопку "SET". Введите три первых цифры кода, соответствующего модели телевизора.

3. Проверьте работу кнопок на ПДУ(Установите кнопку, кнопка питания, клавиши регулировки громкости, кроме). При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

D. 1, Найдите код, соответствующий модели вашего телевизора.

Например, для SKYWORTHY – это «0». Включите телевизор и направьте на него пульт.

2, Удерживайте нажатой кнопку кода, пока не загорится индикаторная лампочка (около 3 секунд). Не отпускайте кнопку, и индикаторная лампочка начнёт мигать. Активизировался режим поиска кода.

Когда на экране появится символ громкости, отпустите кнопку кода. Индикаторная лампочка погаснет. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2

Сравнительная таблица символов марки

Table with 7 columns: BRAND, CODE, SYMBOL, SLEEP, MENU, SOURCE, 1, 2, 3, 4, 5, 6, 7. Rows include AKIRA, AOC, BBK, etc.

Español

A. Ingresar el código 1, Encender el televisor , apunte el control remoto hacia televisor. luego encontrar el correspondiente código de tres dígitos de la marca correspondiente en la tabla de códigos

2, Presiona al mismo tiempo el botón SET y POWER , hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código

3, Ingresar primer conjunto de código de tres dígitos. cada vez que un dígito es la entrada, la luz de indicación parpadea una vez, después que todos los 3 dígitos ha ingresado , la luz de indicador estaría apagado, si el código es más de un conjunto. por favor, utilice la primera.

4, prueba si otros botones de función podría funcionar bien, como el botón de silencio (mute) si no, repita los pasos 2 hasta que encuentre un conjunto de código adecuado.

B. La búsqueda manual del código

1, Encender el televisor , apunte el control remoto hacia televisor.

2, Presiona al mismo tiempo el botón SET y POWER , hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código

3, presione el botón de volumen + una vez y luego suéltelo. ver si el símbolo de volumen aparece en la pantalla de TV, si no se produce tal símbolo, repita el procedimiento.

4, Después de que el símbolo de volumen aparece, pruebe otro botón defunción (excepto el ajuste(SET), POWER, VULUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará , lo que significa que la configuración se ha terminado.

C. La búsqueda automática del códigos.

1, Encender el televisor , apunte el control remoto hacia televisor.

2 Presione y mantenga el botón de ajuste(SET) durante unos 6 segundos hasta la luz indicador se enciende. Ver si el símbolo de volumen aparece en la pantalla , si es así, suelte de inmediato el botón SET para detener la busqueda automática.

3, pruebe otro botón de función (excepto el ajuste (SET), POWER, VULUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará , lo que significa que la configuración se ha terminado. si no, repita los pasos 2 hasta que encuentre el código adecuado.

D. Mode de búsqueda de punto a punto

1, Encender el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SKYWORTHY con su símbolo 0.

2, pulsada botón de símbolo de marco correspondiente, durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadea, Cuando aparece el símbolo de volumen en la pantalla de TV, suelte inmediatamente el botón, y la luz de indicador apagará. Probar si el control remoto funciona bien , si no, repita el procedimientos.

La table de symbole correspondant à la marque

Table with 7 columns: BRAND, CODE, SYMBOL, SLEEP, MENU, SOURCE, 1, 2, 3, 4, 5, 6, 7. Rows include AKIRA, AOC, BBK, etc.

E. Restaurar los ajustes de fábrica Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

Warm Tips If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.
● If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
● whe you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
● Battery Type: two pieces of AAA Batteries After-sales Service
If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please check the shopping bills or receipts when buying the product. The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

Grid of 28 remote controllers with labels: 000 AOC AOC, 002 GENERAL LCD-831, 003 GENERAL LCD-832, 004 IZUMI TL19H405B, 005 IZUMI 0152, 006 EN 30303D, 010 HOB301 MYSTERY KT697 6857, 011 HOB117 AKIRA TC1860F1, 012 HOB187 GK2316-C15, 013 HOB279 AKIRA LC15CHST, 014 4-3-2010-002, 015 BBK BBK, 016 BBK EN-31603B, 017 HOB158 BBK LT1504, 018 HOB332 BBK CAMERON, 019 HOB380 RC2465, 020 HOB387 RC-2603, 021 HVD208 BBK, 022 HVD209 RC1529, 023 HOB228 LCD 831, 024 HOB283 SUPRA 46275TV -LC1504, 025 HOB302 HYUNDAI 1587 RCF1B, 026 HOB303 SUPRA306 STV-LC1515, 027 HOB327 Supra RC3b, 028 HOB328 Supra RCF3b, 029 HOB409 SUPRA Y-72C2, 030 HOB410 SUPRA RC6b

HUAYU[®] RM-L1195+12



031 HOB411 SUPRA RC12 032 RCF1B RCF1B 033 SUPRA BD-212 034 SUPRA HOF12H126 GPD11 035 SUPRA RC1b 036 SUPRA RC5b 037 SUPRA RC5db 038 SUPRA RC13b 039 SUPRA RC-118-0B 040 SUPRA STV-LC2615ED 041 HOB168 SHIVAKI BT0451C 042 HOB231 SHIVAKI 02 043 ROLSEN ER-31607R 044 HTC056 RC1994907-01 045 HTC058 RC198 046 HOB333 81E829 047 HOB394 81E503 048 HOB227 ORION 049 HOB252 OPENBOX -1253 050 HOB281 MYSTERY 5195 051 HOB282 MYSTERY 8151 052 HOB301 MYSTERY KT6957 6857 053 HOB326 MTV-1914LW 054 MESTERY LCD LED TV NEW 055 HSR499 HIVION 056 HOB402 iSTAR 057 HOB403 iSTAR 058 HOB405 iSTAR 059 ER-31607R HOB438 ER-31607R -1098#



063 LCD-2277RC 066 HOB302 HYUNDAI 1587 RCF1B 067 HOB376 H-LCD2202GCO VA1028SJ 068 HOB390 CH-2145 069 FUSION RC3b_1042 070 HOB198 FUNAI 48KEY 071 IR1628 FUNAIPC221 072 HOB018 ELENBERG Y27401 073 HOB354 ELENBERG 074 HOB151 BERICOM008 075 HOB189 HOB189 076 HOB264 RC-A3-01 077 HOB273 HOB273 078 HOB373 EN-21662B 079 HOB223 RC-L-05 080 HOB225 RC-L-06 081 HOB108 ACH-P-2 082 HOB149 BERICOM006 083 HOB150 BERICOM007 084 HOB206 EL-41UA299 085 HOB329 T15E01MT 086 HOB330 H-LED32V6 087 HOB341 STV-LC1914W 088 HOB418 ZD-RC30 089 DMTECH DMTECH 090 HOB262 HOB262 091 HOB344 HOF45A1-2 092 HOB249 PARS 093 HOB292 HS02-2 094 HOB013 HOF-5481.4 095 096 097 098 099



100 HOB339 GI S2138 101 HOB381 HOF12E 148GPD5 102 HOB346 HOF10G 705GPD9 103 SONIQ QT-112 104 SUNSTECH TL1970HD 105 HOB195 H-LCDVD2200 106 HOB196 HOB196 107 HOB314 Singer LCDKZG -108 108 HOB386 RM-611 109 HOB308 IR1492 SENCOR 110 HOB310 HOB310 111 HOB342 STV -LC1985WL 112 HOB382 GI HOF12B441 GPD11 113 HOB220-NF021RD NF028RD-NF031RD -NF036RD 4IN1 114 NF039RD NF039RD 115 PC221 01 116 PC221 02 117 BC10SB BC10SB 118 daytron LCD TV 119 HOB358 RC-A03 120 RC A06 121 RC A10 122 TLCD 32HD- TELEFUNKEN 123 KAIMY KAIMY 124 acer acer 125 HOB162 BERICOM009 126 HOB187 GK23J6-C15 127 LCD-2699 128 HOB229 OPTICUM9600 TS20 129 HOB242 RC1994925 130 HOB253 SNOWA 131 132 133 134 135

HUAYU[®] RM-L1195+12



136 HOB331 AKAI A4001032 137 HOB353 KM1128 138 HOB368 S5 S6 S7 S8 S9 139 LCD-2318 140 HOD142 HOD142 141 HOD148 VT-L9A11 142 HSR553 CYFROWY POLSAT 143 HSR585 IPM PLATFORM 144 Singer LCD TV 901-7650-31SG1G 145 LCD TV FU-1 146 LCT 01 147 LCT 02 148 148 148 149 HOB393 1253 150 12-17-2011_001 151 AOC-01 152 AOC-02 153 BENQ-01 154 BENQ-02 155 BENQ-03 156 BENQ-04 157 BENQ-05 158 VIZIO 159 NEC RP-42L1 160 SANYO JXPYR 161 ROLSEN RL-32L700U 162 POLYTRON 81f579 163 SAM_2446 164 SAM_2443 165 SAM_2457 166 lcd tv



167 AKAI A3001012 168 AKAI CX-507 169 BBK EN-31907 170 CHANGHONG GHK-4421A 171 E-RCU-015 348 BBK_EN-31907 349 Benq 350 china 351 EcoStar 2 352 HCH067-CHANGHONG GHK-4421A 353 Heir 2 354 HOB477 AKAI CX-507 355 HOB478 E-RCU-015 356 HOB479 AKAI A3001012 357 HOB484 Akai LTA -15A15M 358 HOB489 MESTERY LCD LED TV NEW 359 HOB490 Polar HTR -D18A 360 HOB491 Polar 55 LTV6002 361 Orient 362 PROTON 2 363 POLYTRON EN-31618P 81E878 364 HOB864 SNOWA T202-1 365 HOB455 ELECTRON T-81100 366 HOB457 RL-32L700U 3D 367 HOB464 BRAVIS LED2868 HQ 368 HOB465 DIGITAL DLE-4011 370 HOB46 LUXEON LED3213 HQ 371 ORION EP 22 LCD2623 372 HOB493 HAIER 373 HOB494 SUPRA



374 HOB498 SHOWNIC 375 LEA-19V07P 376 IZUMI 377 81F579 378 ORION OR-LCD2 379 FUSION RC21b 380 SUPRA RC6w 381 SUPRA RC8b 382 SUPRA RC10w 383 SUPRA RC18b 384 RC-LEM100 385 BBK RC-LEM101 386 BBK RC-LED100 387 IZUMI TL26H2118 388 JAC 389 SKY LINE 390 TRUMAN 391 union tech 396 ATLAS HD100 397 HOB688 ATLSS HD-2005 398 KK-Y331J 399 KK-Y331J 400 HD LED100 401 GBTY ONGOV59 402 XY-B02E 403 LCD TV PHONAR 405 PHONAR LED TV 406 DAWA MV 407 IDEA 408 IDEA 409 IDEA 410 IDEA

HUAYU[®] RM-L1195+12

411	412	413	414	415	416	417	418	419	420	421	422	423	424	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441		
IDEA	IDEA	IDEA	IDEA	AOC-02	DEX LT-2220	ORION LED2643	Akai SLP-006P	Fusion FLTV 22H11	Fusion FLTV 32H17	FUSION RC15b	Shivaki K77	Shivaki K78	Supra TV-DVD	RC-GK22G1	H-LCD3210	LED321LC	SKYPRIME HD	SUPRA RC21b-1219	ORION LCD	TC1860F1-RS	JH-11370	LED-851	RC-D3	YC-53	STV-22LED5	LED-EH4720BF	DNS M28A8	051D RED	33585		
442	442	442	442	443	444	445	446	449	450	451	452	453	454	516	520	528	531	540	542	543	544	545	546	547	548	549	540	540	550	551	533
RC33729	HOB842	34090	34091	RC31277	Fusion RC25b	RCF23b	RC-E23	AKI AK61	AKI LCD AK66	AKI LCD AK68	AKI-OND IGO LCD	ONIDA LCD	ONIDA LCD ON87	051D BLACK	SNOWA 51163	BLAUPUNKT	J-1274	MERTER 33186	BRAVIS LED-1615	Marshal ME-2409	ONIDA LCD1	Akai HOF08J001	Polar 94 LTV6004	AN-LT3222 AN-LT3225 AN-LT2416	FUSION HY-079	SATURN LED40FHD500U	DEXP 16A3000	RUBIN RB -28D7T2C	DNS S19ASL1	RM-NST60	RM-SK09
576	577	578	579	580	581	582	583	584	585																						
VESTEL LCD T1396	VESTEL LCD	HAIER HTR-A10	EN3V39H	VESTEL LCD T1560	MICROMAX	RECONNECT	YASIN	HISENSE	SANSUI																						