


RM-L1098+15
Instruction for UNIVERSAL
LCD/LED TV REMOTE
CONTROLLER

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could not work well, it should be set with the following methods before controlling your TV.

This remote controller can be used directly for SAMSUNG/LG/SONY/PHILIPS/PANASONIC TVs without any operation.

Introduction:
RM-L1098+15 is the newest universal LCD/LED TV remote controller. Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV.

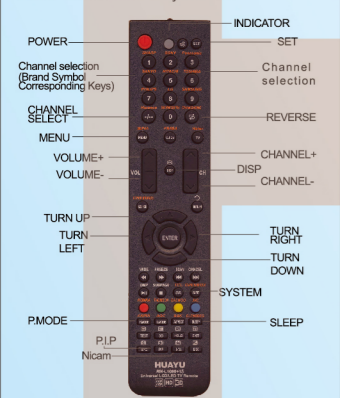

Battery Installation
In accordance with the "+,-" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-ratoned), which is shown in the figure.



Battery Description
The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened. Please do not put old and new batteries or different types of batteries together. In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries. You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

Methods for setting remote controller:

This remote controller has the following methods for setup, you can choose any of them.

\*\*\*\*\*

A. Inputting code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.

3, Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.

4, Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

B. Manually searching for the code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, the remote controller will be in the state of Manually searching for the code.

3, Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.

4, Till the volume symbol appears on your TV, test other function buttons(except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

C. Automatically searching code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2, Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.

3, Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

D. Point to Point Brand Searching:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SAMSUNG = "9".

2, Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.

E. Restore factory Settings

Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

\*\*\*\*\*

Warm Tips

- If you have any problems when you set or use this remote controller, please try to do as follow:
When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, please input the other codes according to sequence.
If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
If you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
Battery Type: two pieces of AAA Batteries

After-sales Service

If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product.

The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

Русский

A. Поиск нужной марки телевизора с помощью ввода кода вручную
1. Включите телевизор и в перечне кодов найдите тот, который соответствует марке Вашего телевизора.

2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка.

3. Введите три первых цифры кода, соответствующего модели телевизора, после ввода кода индикатор перестанет гореть, установка завершена

4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

B. Способ ручного поиска кода:

1. Включите телевизор и направьте на него пульт.

2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка. Тогда релиз, на этот раз в состоянии ручного поиска.

3. Нажмите кнопку "громкость+", затем освободите ее, когда появится символ громкости, при каждом нажатии индикатор мигает один раз, если не появится символ громкости, повторите операцию.

4. После появления символа громкости проверьте другие кнопки (кроме кнопки настройки, кнопки питания, кнопки громкости). Если другие функции нормальны, нажмите кнопку "настройки", индикатор настройки гасит, настройка выполнена.

C. Модели с функцией автоматического поиска

1. Включите телевизор и направьте на него пульт.

2. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. Индикаторная лампочка начнет мигать.

3. Проверьте работу кнопок на ПДУ (Установите кнопку, кнопку питания, клавиши регулировки громкости, громкости). При наличии проблем повторите процедуру настройки, начиная с шага 2.

D. Найдите код, соответствующий модели вашего телевизора. Например, для SAMSUNG - это «9». Включите телевизор и направьте на него пульт.

4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

E. Restoring factory settings

Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

\*\*\*\*\*

Warm Tips

- If you have any problems when you set or use this remote controller, please try to do as follow:
When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, please input the other codes according to sequence.
If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
If you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
Battery Type: two pieces of AAA Batteries

After-sales Service

If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product.

The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

Español

A. Ingresa el código
1. Encender el televisor, apunte el control remoto hacia televisor. luego encontrar el correspondiente código de tres dígitos de la marca correspondiente en la tabla de códigos

2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código

3. Ingresar primer conjunto de código de tres dígitos. cada vez que un dígito es la entrada, la luz de indicación parpadea una vez, después que todos los 3 dígitos ha ingresado, la luz de indicador estaría apagado, si el código es más de un conjunto, por favor, utilice la primera.

4. prueba si otros botones de función podría funcionar bien, como el botón de silencio (mute) si no, repita los pasos 2 hasta que encuentre un conjunto de código adecuado.

B. La búsqueda manual del código

1. Encender el televisor, apunte el control remoto hacia televisor.

2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código

3. presione el botón de volumen + una vez y luego suéltelo. ver si el símbolo de volumen aparece en la pantalla de TV, si no se produce tal símbolo, repita el procedimiento.

4. Después de que el símbolo de volumen aparece, pruebe otro botón defunción (excepto el ajuste(SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

C. Restaurar los ajustes de fábrica

Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

\*\*\*\*\*

Warm Tips

- If you have any problems when you set or use this remote controller, please try to do as follow:
When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, please input the other codes according to sequence.
If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
If you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
Battery Type: two pieces of AAA Batteries

After-sales Service

If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product.

The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

C. La búsqueda automática del códigos.

1. Encender el televisor, apunte el control remoto hacia televisor.

2. Presione y mantenga el botón de ajuste(SET) durante unos 6 segundos hasta la luz indicador se enciende. Ver si el símbolo de volumen aparece en la pantalla, si es así, suelte de inmediato el botón SET para detener la búsqueda automática.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado. si no, repita los pasos 2 hasta que encuentre el código adecuado.

D. Mode de búsqueda de punto a punto

1. Encender el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SAMSUNG con su símbolo 9.

2. pulsada botón de símbolo de marco correspondiente, durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadea. Cuando aparece el símbolo de volumen en la pantalla de TV, suelte inmediatamente el botón, y la luz de indicador apagará. Probar si el control remoto funciona bien, si no, repita el procedimientos.

E. Restaurar los ajustes de fábrica

Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

\*\*\*\*\*

Warm Tips

- If you have any problems when you set or use this remote controller, please try to do as follow:
When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, please input the other codes according to sequence.
If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
If you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
Battery Type: two pieces of AAA Batteries

After-sales Service

If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product.

The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

C. La búsqueda automática del códigos.

1. Encender el televisor, apunte el control remoto hacia televisor.

2. Presione y mantenga el botón de ajuste(SET) durante unos 6 segundos hasta la luz indicador se enciende. Ver si el símbolo de volumen aparece en la pantalla, si es así, suelte de inmediato el botón SET para detener la búsqueda automática.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado. si no, repita los pasos 2 hasta que encuentre el código adecuado.

D. Mode de búsqueda de punto a punto

1. Encender el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SAMSUNG con su símbolo 9.

2. pulsada botón de símbolo de marco correspondiente, durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadea. Cuando aparece el símbolo de volumen en la pantalla de TV, suelte inmediatamente el botón, y la luz de indicador apagará. Probar si el control remoto funciona bien, si no, repita el procedimientos.

E. Restaurar los ajustes de fábrica

Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

\*\*\*\*\*

Warm Tips

- If you have any problems when you set or use this remote controller, please try to do as follow:
When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, please input the other codes according to sequence.
If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
If you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
Battery Type: two pieces of AAA Batteries

After-sales Service

If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product.

The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

C. La búsqueda automática del códigos.

1. Encender el televisor, apunte el control remoto hacia televisor.

2. Presione y mantenga el botón de ajuste(SET) durante unos 6 segundos hasta la luz indicador se enciende. Ver si el símbolo de volumen aparece en la pantalla, si es así, suelte de inmediato el botón SET para detener la búsqueda automática.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado. si no, repita los pasos 2 hasta que encuentre el código adecuado.

D. Mode de búsqueda de punto a punto

1. Encender el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SAMSUNG con su símbolo 9.

2. pulsada botón de símbolo de marco correspondiente, durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadea. Cuando aparece el símbolo de volumen en la pantalla de TV, suelte inmediatamente el botón, y la luz de indicador apagará. Probar si el control remoto funciona bien, si no, repita el procedimientos.

E. Restaurar los ajustes de fábrica

Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

\*\*\*\*\*

Warm Tips

- If you have any problems when you set or use this remote controller, please try to do as follow:
When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, please input the other codes according to sequence.
If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
If you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
Battery Type: two pieces of AAA Batteries

After-sales Service

If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product.

The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

000 001 002 003 004 005 006 010 010 010



AOC AOC, VIDEALE, GENERAL LCD-831, GENERAL LCD-832, IZUMI TL19H405B, IZUMI 0152, EN 30303D, HOB301 MYSTERY KT6957 6857, BBK RC-LEM110, BBK RC-LEX510

010 010 011 012 013 014 015 016 016 017 018



RC-SMART, RC-SMART, HOB117, HOB187, HOB279, 4-3-2010-002, BBK BBK, EN-31603B, Hisense EN2W30H, HOB158, HOB332, AKIRA TC1860F1, GK23J6-C15, AKIRA LCHT-15CHST, BBK CAMERON

019 020 021 022 023 024 025 026 027 027



HOB380 RC2465, HOB387 RC-2603, HVD208 BBK, HVD209 RC1529, HOB228 LCD 831, HOB283 SUPRA 4627STV-LC1504, HOB302 HYUNDAI 1587 RCF18, HOB303 SUPRA306 1587 RCF18, HOB327 Supra RC3b, SAMASUNG HOB332 RC1667-01




028 HOB328 Supra RCF3b  
029 HOB409 SUPRA Y-72C2  
030 HOB410 SUPRA RC6b  
031 HOB411 SUPRA RC12  
032 RCF1B RCF1B  
033 SUPRA BD-212  
034 SKYWORTH  
034 SNOWA HOF22A265GPD9  
034 SUPRA HOF12H126 GPD11  
035 SUPRA RC1b  
036 SUPRA RC5b  
037 SUPRA RC5db  
038 SUPRA RC13b  
039 SUPRA RC-118-0B  
040 SUPRA STV-LC2615ED  
041 HOB168 SHIVAKI BT0451C  
042 HOB231 SHIVAKI 02  
043 ROLSEN ER-31607R  
046 HTC056 RC1994907-01  
047 HTC058 RC198  
048 HOB333 81E829  
049 HOB394 81E503  
050 HOB227 ORION  
051 HOB252 OPENBOX -1253  
052 HOB281 MYSTERY 5195  
053 HOB282 MYSTERY 8151  
054 HOB301 MYSTERY KT6957 6857  
055 HOB326 MTV-1914LW  
056 MESTERY LOD LED TV NEW  
057 HSR499 HIVION  
058 HOB402 ISTAR



059 HOB403 ISTAR  
060 HOB405 ISTAR  
061 ER-31607  
062 HOB438 ER-31607R -1098#  
063 LCD-2277RC  
066 HOB302 HYUNDAI 1587 RCF1B  
067 HOB376 H-LCD2202GCO VA1028SJ  
068 HOB390 CH-2145  
069 FUSION RC3\_1042  
070 FUNAI 48KEY  
071 IR1628 FUNAI PC221  
073 HOB018 ELENBERG Y27401  
074 X-VISION RC29025  
074 ELENBERG  
079 HOB151 BERICOM008  
080 HOB189 HOB189  
081 HOB264 RC-A3-01  
082 HOB273 HOB273  
083 HOB373 EN-21662B  
084 HOB223 RC-L-05  
085 HOB225 RC-L-06  
086 HOB108 ACH-P-2  
087 HOB149 BERICOM006  
088 HOB150 BERICOM007  
089 HOB206 EL-41UA299  
090 HOB329 T15E01MT  
091 HOB330 H-LED32V6  
092 HOB341 STV-LC1914W  
093 HOB418 ZD-RC30  
094 BLAUPUNKT  
094 DMTECH DMTECH  
095 HOB262 HOB262



096 HOB344 HOF45A1-2  
097 HOB249 PARS  
098 HOB292 H502-2  
099 HOB013 HOF-54B1.4  
100 HOB339 GI S2138  
101 HOB381 HOF12E 148GPD5  
102 HOB346 HOF10G 705GPD9  
103 SONIQ QT-112  
104 SUNSTECH TL1970HD  
105 HOB195 H-LCDVD2200  
106 HOB196 HOB196  
107 HOB314 Singer LCDKZG -108  
108 HOB386 RM-611  
109 HOB308 IR1492 SENCOR  
110 HOB310 HOB310  
112 EMC RC1359  
112 HOB342 STV -LC1985WL  
113 HOB382 GI HOF12B44NF028RD-NF031RD  
114 HOB220-NF021RD -NF036RD 4IN1  
115 NF039RD NF039RD  
116 TOSHIBA CT-8070  
116 TOSHIBA CT-8507  
116 TOSHIBA CT-90423  
116 TOSHIBA CT-95022  
117 PC221 01  
120 PC221 02  
120 BC10SB BC10SB  
121 daytron LCD TV  
122 HOB358 RC-A03  
123 RC A06  
124 RC A10  
125 TLCD 32HD- TELEFUNKEN  
126 KAIMY KAIMY

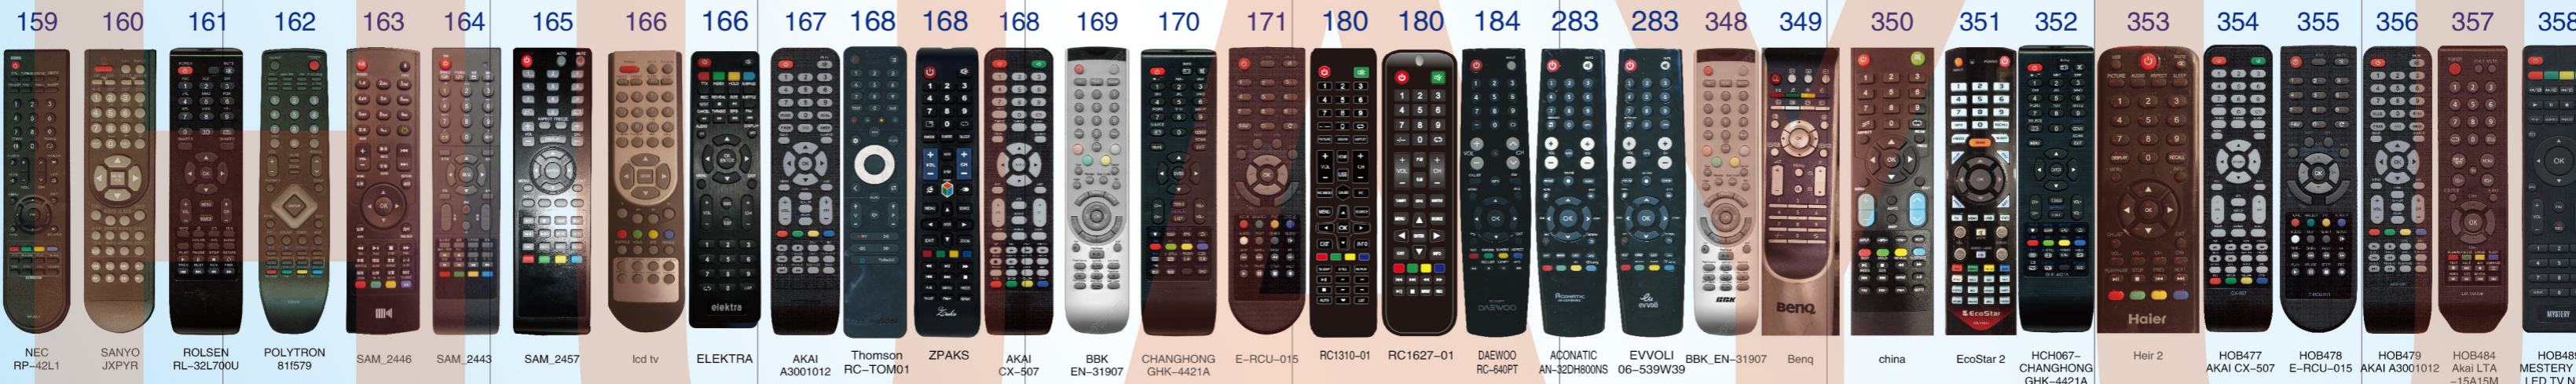



397 HOB688 ATLS HD-200S 398 KK-Y331J 399 KK-Y331J 400 HD LED100 401 GBTV ONGOV59 402 XY-B02E 403 LCD TV PHONAR 405 PHONAR LED TV 406 DAWA MV 407 IDEA 408 IDEA 409 IDEA 410 IDEA 411 IDEA 412 IDEA 413 IDEA 414 IDEA 415 AOC-02 416 DEX LT-2220 417 ORION LED2643 418 Akai SLP-006P 419 Fusion FLT V 22H11 420 Fusion FLT V 32H17 421 FUSION RC15b 422 Shivaki K77 423 Shivaki K78 424 Supra TV-DVD 426 RC-GK22G1 427 H-LCD3210 428 LED321LC 429 SKYPRIME HD SP-HD 430 SUPRA RC21b-1219



431 ORION LCD TC1860F1-RS 432 JH-11370 433 LED-851 434 RC-D3 435 YC-53 436 STV-22LED5 437 LED-DH720BF 438 DNS M28AM8 439 051D RED 440 33585 441 RC33729 442 HOB842 442 34090 442 34091 443 RC31277 444 Fusion RC25b 445 RCF23b 446 RC-E23 449 AKI AK61 450 AKI LCD AK66 451 AKI LCD AK68 452 AKI-OND IGO LCD 453 ONIDA LCD 454 ONIDA LCD ON87 479 Muller RC1818 IR-V1 516 051D BLACK 520 SNOWA 51163 528 BLAUPUNKT J-1274 531 RM-SK09 533 MERTER 33186 540 BRAVIS LED-1615 542 Marshal ME-2409 543



544 ONIDA LCD1 545 Akai HOF08J001 546 Polar 94 LTV6004 547 AN-LT3222 AN-LT3225 AN-LT2416 548 FUSION HY-079 549 SATURN LED40FHD500U 540 DEXP 16A3000 540 RUBIN RB -28D7T2C 550 DNS S19ASL1 551 XVISION 06-53WV39-XV02X 551 RM-NST60 560 iSmart ATV 576 VESTEL LCD T1396 577 VESTEL LCD 578 HAIER HTR-A10 579 EN3V39H 580 VESTEL LCD T1560 581 MICROMAX 582 RECONNECT 583 YASIN 584 HISENSE 585 SANSUI