


170\*693mm

第一张正面

HUAYU English RM-L1130+15 Instruction for UNIVERSAL LCD/LED TV REMOTE CONTROLLER

Battery Description The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.

Introduction: RM-L1130+15 is the newest universal LCD/LED TV remote controller, Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.

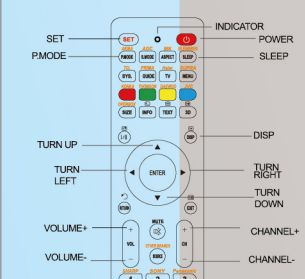

Battery Installation In accordance with the "+,-" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rationed), which is shown in the figure.

Battery Description The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.

Methods for setting remote controller: This remote controller has the following methods for setup, you can choose any of them.

A. Inputting code: 1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

2. Press "SET" button, then press "POWER" button, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.

3. Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.

B. Manually searching for the code: 1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SKYWORTHY = "0"

2. Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the button, the remote controller will be in the state of Manually searching for the code.

controller will be in the state of Manually searching for the code. 3. Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.

4. Till the volume symbol appears on your TV, test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

C. Automatically searching code: 1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

2. Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.

3. Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

D. Point to Point Brand Searching: 1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SKYWORTHY = "0"

2. Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.

E. Restore factory Settings Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

Brand symbol table

Table with 7 columns for brand codes and 7 rows for different brands like AOC, ACC, BBK, etc.

Русский А. Поиск нужной марки телевизора с помощью ввода кода вручную

1. Включите телевизор и в перечне кодов найдите тот, который соответствует марке Вашего телевизора.

2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка.

3. Введите три первых цифры кода, соответствующего модели телевизора. После ввода кода индикатор перестанет гореть, установка завершена

4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

В. Способ ручного поиска кода: 1. Включите телевизор и направьте на него пульт.

2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка. Тогда релиз, на этот раз в состоянии ручного поиска кода.

3. Нажмите кнопку "громкость+", затем освободите её, когда появится символ громкости, при каждом нажатии индикатор мигает один раз, если не появится символ громкости, повторите операцию.

4. После появления символа громкости проверьте другие кнопки (кроме кнопки настройки, кнопки питания, кнопки громкости). Если другие функции нормальны, нажмите кнопку "настройки", индикатор настройки гасит, настройка выполнена.

С. Модели с функцией автоматического поиска

1. Включите телевизор и направьте на него пульт.

2. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. Индикаторная лампочка начнёт мигать. Пульт активировал функцию автоматического поиска. Внимательно смотрите на экран телевизора. Не отпуская кнопку "SET". Введите три первых цифры кода, соответствующего модели телевизора.

3. Проверьте работу кнопок на ПДУ (Установите кнопку, кнопка питания, клавиши регулировки громкости, кроме). При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

Д. 1. Найдите код, соответствующий модели вашего телевизора. Например, для SKYWORTHY — это «0». Включите телевизор и направьте на него пульт.

2. Удерживайте нажатой кнопку кода, пока не загорится индикаторная лампочка (около 3 секунд). Не отпускайте кнопку, и индикаторная лампочка начнёт мигать. Активизировался режим поиска кода. Когда на экране появится символ громкости, отпустите кнопку кода. Индикаторная лампочка погаснет. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2

Сравнительная таблица символов марки

Table with 7 columns for brand codes and 7 rows for different brands like AOC, ACC, BBK, etc.

А. Ingresar el código 1. Encender el televisor, apunte el control remoto hacia televisor. luego encontrar el correspondiente código de tres dígitos de la marca correspondiente en la tabla de códigos

2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código

3. Ingresar primer conjunto de código de tres dígitos. cada vez que un dígito es la entrada, la luz de indicación parpadea una vez, después que todos los 3 dígitos ha ingresado, la luz de indicador estaría apagado, si el código es más de un conjunto, por favor, utilice la primera.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VULUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado, si no, repita los pasos 2 hasta que encuentre el código adecuado.

В. La búsqueda manual del código 1. Encender el televisor, apunte el control remoto hacia televisor.

2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código

3. presione el botón de volumen + una vez y luego suéltelo, ver si el símbolo de volumen aparece en la pantalla de TV, si no se produce tal símbolo, repita el procedimiento.

4. Después de que el símbolo de volumen aparece, pruebe otro botón de

función (excepto el ajuste(SET), POWER, VULUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

С. La búsqueda automatica del códigos. 1. Encender el televisor, apunte el control remoto hacia televisor.

2. Presione y mantenga el botón de ajuste(SET)durante unos 6 segundos hasta la luz indicador se enciende. Ver si el simbolo de volumen aparece en la pantalla, si es así, suelte de inmediato el botón SET para detener la búsqueda automatica.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VULUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado, si no, repita los pasos 2 hasta que encuentre el código adecuado.

Д. Mode de búsqueda de punto a punto 1. Encender el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SKYWORTHY con su símbolo 0.

2. pulsada botón de símbolo de marco correspondiente, durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadea. Cuando aparece el símbolo de volumen en la pantalla de TV, suelte inmediatamente el botón, y la luz de indicador apagará. Probar si el contro remoto funciona bien, si no, repita el procedimientos.

La table de symbole correspondant à la marque

Table with 7 columns for brand codes and 7 rows for different brands like AOC, ACC, BBK, etc.

E. Restaurar los ajustes de fábrica Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

Warm Tips If you have any problems when you set or use this remote controller, please try to do as follow: When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.

Technical parameters Remote Controlling Distance: About 8 meters (varies by different types) Battery Type: two pieces of AAA Batteries After-sales Service If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shipping bills or receipts when buying the product. The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

Grid of 40 remote controllers with brand names and codes: 000 AOC, 001 VIDEALE, 002 GENERAL LCD-831, 003 GENERAL LCD-832, 004 IZUMI TL19H405B, 005 IZUMI 0152, 006 EN 30303D, 010 HOB301 MYSTERY KT6957 6867, 010 RC-LEM110, 010 RC-LEX510, 010 RC-SMART, 010 RC-SMART, 011 HOB117 AKIRA TC1860F1, 012 HOB187 GK23J6-C15, 013 HOB279 AKIRA LCT-15CHST, 014 4-3-2010-002, 015 BBK, 016 BBK EN-31603B, 016 EN2W30H, 017 HOB158 BBK LT1504, 018 HOB332 BBK CAMERON, 019 HOB380 RC2465, 020 HOB387 RC-2603, 021 HVD208 BBK, 022 HVD209 RC1529, 023 HOB228 LCD 831, 024 HOB283 SUPRA 4627STV -LC1504, 025 HOB302 HYUNDAI 1587 RCF1B, 026 HOB303 SUPRA306 STV-LC1515, 027 HOB327 Supra RC3b, 027 SAMASONG HISONV RC1667-01, 028 HOB328 Supra RCF3b, 029 HOB409 SUPRA Y-72C2, 030 HOB410 SUPRA RC6b, 031 HOB411 SUPRA RC12, 032 RCF1B, 033 SUPRA BD-212, 034 SUPRA HOF12H126 GPD11, 034 SKYWORTH, 034 SNOWA HOF22A265GPD9, 035 SUPRA RC1b, 036 SUPRA RC5b, 037 SUPRA RC5db, 038 SUPRA RC13b, 039 SUPRA RC-118-0B, 040 SUPRA STV-LC2615ED

HUAYU®

RM-L1130+15

041

042

043

046

047

048

049

050

051

052

053

054

055

056

057

058

059

060

061

062

063

066

067

068

069

070

071

073

074

074

079

080

081

082

083

084

085

086

087

088

089



HOB168 SHIVAKI BT0451C

HOB231 SHIVAKI 02

ROLSER ER-31607R

HTC056 RC1994907-01

HTC058 RC198

HOB333 81E829

HOB394 81E503

HOB227 ORION

HOB252 OPENBOX -1253

HOB281 MYSTERY 5195

HOB282 MYSTERY 8151

HOB301 MYSTERY KT6957 6857

HOB326 MTV-1914LW

MESTERY LCD LED TV NEW

HSR499 HIVION

HOB402 ISTAR

HOB403 ISTAR

HOB405 ISTAR

ER-31607

HOB438 ER-31607R -1098#

LCD-2277RC

HOB302 HYUNDAI 1587H-LCD2202GCC RCF1B

HOB376 H-LCD2202

HOB390 CH-2145

FUSION RC3b\_1042

HOB198 FUNAI 48KEY

IR1628 FUNAIPC221

HOB018 ELENBERG Y27401

HOB354 ELENBERG

RC29025 HOB2268

HOB151 BERICOM008

HOB189 HOB189

HOB264 RC-A3-01

HOB273 HOB273

HOB373 EN-21662B

HOB223 RC-L-05

HOB225 RC-L-06

HOB108 ACH-P-2

HOB149 BERICOM006

HOB150 BERICOM007

HOB206 EL-41UA299

090

091

092

093

094

094

095

096

097

098

099

100

101

102

103

104

105

106

107

108

109

110

112

112

113

114

115

116

116

116

116

116

117

120

121

122

123

124

125

126

126

126

127

130



HOB329 T15E01MT

HOB330 H-LED32V6

HOB341 STV-LC1914W

HOB418 ZD-RC30

DMTECH DMTECH

BLAUPUNKT

HOB262 HOB262

HOB344 HOF45A1-2

HOB249 PARS

HOB292 H502-2

HOB013 HOF-54B1.4

HOB339 GI S2138

HOB381 HOF12E 148GPD5

HOB346 HOF10G 705GPD9

SONIQ QT-112

SUNSTECH TL1970HD

HOB195 H-LCDVD2200

HOB196 HOB196

HOB314 Singer LCDKZG -108

HOB386 RM-611

HOB308 IR1492 SENCOR

HOB310 HOB310

HOB342 STV -LC1985WL

RC1359

HOB382 GI HOF12B441

HOB220-NF021RD -NF026RD -NF031RD -NF036RD 4IN1

NF039RD NF039RD

PC221 01

CT-8070

CT-8507

CT-90423

CT-95022

PC221 02

BC10SB BC10SB

daytron LCD TV

HOB358 RC-A03

RC A06

RC A10

TLCD 32HD- TELEFUNKEN

KAIMY KAIMY

YKF-236E01

YKF-216E01

acer acer

HOB162 BERICOM009



HUAYU<sup>®</sup> RM-L1130+15



390 391 396 397 398 399 400 401 402 403 405 406 407 408 409 410 411 412 413 414 415 416 417 418 419 420 421 422 423 424 426 427 428 429 430 431 432 433 434 435 436 437 438 439  
TRUMAN union tech ATLAS HD100 HOB688 ATLSS HD-200S KK-Y331J KK-Y331J HD LED100 GBTY ONGOV59 XY-B02E LCD TV PHONAR PHONAR LED TV DAWA MV iDEA iDEA iDEA iDEA iDEA iDEA iDEA iDEA AOC-02 DEX LT-2220 ORION LED2643 Akai SLP-006P Fusion FLT V 22H11 Fusion FLT V 32H17 FUSION RC15b Shivaki K77 Shivaki K78 Supra TV-DVD RC-GK22G1 H-LCD3210 LED321LC SKYPRIME HD SUPRA RC21b-1219 ORION LCD TC1860F1-RS JH-11370 LED-851 RC-D3 YC-53 STV-22LED5 LED-EH4720BF DNS M28AM8



440 441 442 442 442 442 443 444 445 446 449 450 451 452 453 454 479 516 520 528 531 533 540 542 543 544 545 546 547 548 549 540 550 551 551 560 576 577 578 579 580 581 582 583 584 585  
051D RED 33585 RC33729 HOB842 34090 34091 RC31277 Fusion RC25b RCF23b RC-E23 AKI AK61 AKI LCD AK66 AKI LCD AK68 AKI-OND IGO LCD ONIDA LCD ONIDA LCD ON87 RC1818 IR-V1 051D BLACK SNOWA 51163 BLAUPUNKT J-1274 RM-SK09 MERTER 33186 BRAVIS LED-1615 Marshal ME-2409 ONIDA LCD1 Akai HOF08J001 Polar 94 LTV6004 AN-LT3222 AN-LT3225 AN-LT2416 FUSION HY-079 SATURN LED40FHD500U DEXP 16A3000 RUBIN RB -28D7T2C DNS S19ASL1 RM-NS760 X.VISION 06 539W39-XV02X iSmart ATV VESTEL LCD T1396 VESTEL LCD HTR-A10 EN3V39H VESTEL LCD T1560 MICROMAX RECONNECT YASIN HISENSE SANSUI 80065455