

尺寸：345*210mm

ClickPDU® RM-L1780

English

ClickPDU UNIVERSAL REMOTE CONTROL FOR Haier

Thank you for using the remote controller. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setting it. However, if it could not work well, it should be set with the following methods before remote controlling your TV. The remote controller would not lose its memory when the power is down so that you could replace the battery without resetting it.



Settings of Remote controller:

The remote controller has the following methods of settings, please choose any of them.

Inputting code:

- 1, Turn on your TV manually and make it in a normal play state, let the remote control aim to the front of your TV, and then find out the corresponding remote control code of your TV from the "Code Table".
- 2, Press "POWER" and "MUTE" button together, when the indicator light, then release, enter the corresponding code. The indicator will turn off, setting to be finished.
- 3, Test the functions (such as Volume button) can work well or not. If not, repeat step 2 until you find the suitable code.

Automatically searching code:

- 1, Turn on your TV manually and make it in a normal play state, let the remote control aim to the front of your TV.
- 2, Press the "MUTE" button, and hold about 6 seconds, the indicator will flash, now the remote control turns to automatic search mode. When volume mark appear on your TV, release the button immediately, the indicator will turn off, setting to be finished.
- 3, Test the functions (such as Volume button) can work well or not. If not, repeat step 2 until you find the suitable code.

Technical parameters:

Remote Controlling Distance:
About 10 meters (varies by different types). Battery Type: two pieces of AAA Batteries.

русский

ClickPDU универсальный пульт для брендов Haier

Ввод кода:

Настройка пульта
дистанционного управления:

Настройку пульта можно
произвести одним из следующих
способов.

Автоматический поиск:

1. Включите вручную телевизор, направьте пульт на телевизор и найдите соответствующий вашему TV пульт в «Таблице кодов»
2. Нажмите кнопки «POWER» и «MUTE» одновременно, когда индикатор загорится – отпустите обе кнопки. Введите соответствующий код. Индикатор погаснет – настройка завершена.
3. Проверьте функции (например кнопки регулировки звука). Если эти кнопки не работают, то повторите пункт 2, пока не найдёте подходящий код.

Технические характеристики

Дальность действия пульта: до 10 метров, в зависимости от модели пульта.
Тип батареек: 2 батарейки AAA.

