

RM-L1120+15

Instruction for UNIVERSAL LCD/LED TV REMOTE CONTROLLER

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. if it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

Introduction:

RM-L1120+15 is the newest universal LCD/LED TV remote controller, Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.



Battery Description

The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.
Please do not put old and new batteries or different types of batteries together.
In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries.
You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

Methods for setting remote controller:

This remote controller has the following methods for setup, you can choose any of them.

Automatically searching code:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2. Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.

3. Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

4. Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.

5. Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

Manually searching for the code:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2. Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release button at once, the indicator lamp will turn off, set to be finished.

3. Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.

4. Till the volume symbol appears on your TV, test other function buttons(except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

5. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

6. Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.

7. Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.

8. Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

9. Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.

10. Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

11. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remotecontrol, for example, SKYWORTHY = "0"

12. La table de symbole correspondant à la marque

	1	2	3	4	5	6	7						
AKIRA	AVC	BAR	BLUR	GUIDE	SHARP	SONY	Panasonic	SANYO	NEC	LG	PHILIPS	THOMSON	JVC
8	9	0	1	2	3	4	5	6	7	8	9	0	1

13. After the appearance of the volume symbol, please press other buttons (except SET, POWER, and VOLUME button), such as channel selection, power, volume, etc. If the indicator lamp flashes, it means the code is correct, otherwise, please repeat the above steps.

14. Presionar al mismo tiempo el botón SET y POWER , hasta la luz indicador se encienda, luego suelta el botón por lo que se convierte en el estado de entrada de código

15. pruebe otro botón de función (excepto el ajuste (SET), POWER, VULUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se

16. apagará , lo que significa que la configuración se ha terminado. si no, repita los pasos 2 hasta que encuentre el código adecuado.

17. Mode de búsqueda de punto a punto

18. Encender el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SKYWORTHY con su símbolo 0

19. pulsada botón de símbolo de marco correspondiente,durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadea, Cuando aparece el símbolo de volumen en la pantalla de TV, suelte inmediatamente el botón, y la luz de indicador apagará. Probar si el control remoto funciona bien , si no, repita el procedimiento.

20. Presione al mismo tiempo el botón SET y POWER , hasta la luz indicador se encienda, luego suelta el botón por lo que se convierte en el estado de entrada de código

21. Restaurar los ajustes de fábrica

22. Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

23. Warm Tips

If you have any problems when you set or use this remote controller, please try to do as follow:

• When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device,

Please input the other codes according to sequence.

• If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need

to reset from step 1.

• when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

24. Technical parameters

• Remote Controlling Distance: About 8 meters (varies by different types)

• Battery Type: two pieces of AAA Batteries

After-sales Service

If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible.

We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product.

The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

B0065514

E.Restore factory Settings

Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

Русский

А.Поиск нужной марки телевизора с помощью ввода кода вручную

1. Включите телевизор и направьте на него пульт. 2. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. Индикаторная лампочка начнёт мигать.

Б.Ла búsqueda manual del código

1. Encender el televisor , apunte el control remoto hacia televisor.

2. Presiona al mismo tiempo el botón SET y POWER , hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código

С.Модели с функцией автоматического поиска

3. Ingresar primer conjunto de código de tres dígitos, cada vez que un dígito es la entrada, la luz de indicación parpadea una vez, después que todos los 3 dígitos que ingresado , la luz de indicador estaría apagado, si el código es más de un conjunto. por favor, utilice la primera.

Д.Mode de búsqueda de punto a punto

1. prueba si otros botones de función podrían funcionar bien, como el botón de silencio (mute)

2. pulsada botón de símbolo de marco correspondiente,durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadea,

3. pulsada botón de volumen + una vez y luego suéltelo, ver si el símbolo de volumen aparece en la pantalla de TV, si no se produce tal símbolo, repita el procedimiento.

Е.Restaurar los ajustes de fábrica

Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

Warm Tips

If you have any problems when you set or use this remote controller, please try to do as follow:

• When you set this remote controller, please do according to the steps of the method "inputting code". If it can't

control your device,

Please input the other codes according to sequence.

• If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need

to reset from step 1.

• when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters

• Remote Controlling Distance: About 8 meters (varies by different types)

• Battery Type: two pieces of AAA Batteries

After-sales Service

If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible.

We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product.

The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

B0065514

Spanish

A.Ingresa el código

1. Encender el televisor , apunte el control remoto hacia televisor.

2. Presione y mantenga el botón de ajuste(SET)durante unos 6 segundos hasta la luz indicador se enciende.Ver si el símbolo de volumen aparece en la pantalla ,si es así,suelte de inmediato el botón SET para detener la búsqueda automática.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VULUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se

C.La búsqueda automatica del códigos.

1. Encender el televisor , apunte el control remoto hacia televisor.

2. Presione y mantenga el botón de ajuste(SET)durante unos 6 segundos hasta la luz indicador se enciende.Ver si el símbolo de volumen aparece en la pantalla ,si es así,suelte de inmediato el botón SET para detener la búsqueda automática.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VULUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se

D.Ingresa el código

1. Encender el televisor , apunte el control remoto hacia televisor.

2. Presiona al mismo tiempo el botón SET y POWER , hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código

E. Restaurar los ajustes de fábrica

Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

Technical parameters

• Remote Controlling Distance: About 8 meters (varies by different types)

• Battery Type: two pieces of AAA Batteries

After-sales Service

If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible.

We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product.

The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

B0065514

Modelos con función de búsqueda automática

3. Ingresar primer conjunto de código de tres dígitos, cada vez que un dígito es la entrada, la luz de indicación parpadea una vez, después que todos los 3 dígitos que ingresado , la luz de indicador estaría apagado, si el código es más de un conjunto. por favor, utilice la primera.

4. Mode de búsqueda de punto a punto

1. Encender el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SKYWORTHY con su símbolo 0

2. pulsada botón de símbolo de marco correspondiente,durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadea,

3. pulsada botón de volumen + una vez y luego suéltelo, ver si el símbolo de volumen aparece en la pantalla de TV, si no se produce tal símbolo, repita el procedimiento.

5. La búsqueda manual del código

1. Encender el televisor , apunte el control remoto hacia televisor.

2. Presiona al mismo tiempo el botón SET y POWER , hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código

6. Restaurar los ajustes de fábrica

Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

7. Warm Tips

If you have any problems when you set or use this remote controller, please try to do as follow:

• When you set this remote controller, please do according to the steps of the method "inputting code". If it can't

control your device,

Please input the other codes according to sequence.

• If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need

to reset from step 1.

• when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters

• Remote Controlling Distance: About 8 meters (varies by different types)

• Battery Type: two pieces of AAA Batteries

After-sales Service

If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible.

We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product.

The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

B0065514

HUAYU® RM-L1120+15

028	029	030	031	032	033	034	034	034	035	036	037	038	039	040	041	042	043	046	047	048	049	050	051	052	053	054	055	056	057	058	
HOB328 Supra RCF3b	HOB409 SUPRA Y-72C2	HOB410 SUPRA RC6b	HOB411 SUPRA RC12	RCF1B RCF1B	SUPRA BD-212	SKYWORTH	SNOWA HOF22A265GPD9	SUPRA HOF12H126 GPD11	SUPRA RC5b	SUPRA RC5db	SUPRA RC13b	SUPRA RC-118-0B	SUPRA STV-LC2615ED	HOB168 SHIVAKI BT0451C	HOB231 SHIVAKI 02	ROLSEN ER-31607R	HTC056 RC1994907-01	HOB333 81E829	HOB394 81E503	HOB227 ORION	HOB252 OPENBOX -1253	HOB281 MYSTERY 5195	HOB301 MYSTERY KT6957 6857	HOB326 MTV-1914LW	MESTERY LCD LED TV NEW	HSR499 HIVION	HOB402 ISTAR				
059	060	061	062	063	066	067	068	069	070	071	073	074	074	079	080	081	082	083	084	085	086	087	088	089	090	091	092	093	094	095	
HOB403 iSTAR	HOB405 iSTAR	ER-31607	HOB438 ER-31607R	LCD-2277RC	HOB302 HYUNDAI 1587 RCF1B	HOB376 H-LCD2202GCO -1098#	HOB390 CH-2145	FUSION RC3b_1042	HOB198 FUNAI 48KEY	IR1628 FUNAI PC211	HOB018 ELENBERG Y27401	X-VISION RC29025	HOB354 ELENBERG	HOB151 BERICOM008	HOB189 HOB189	HOB264 RC-A3-01	HOB273 HOB273	HOB373 EN-21662B	HOB223 RC-L-05	HOB225 RC-L-06	HOB108 ACH-P-2	HOB149 BERICOM006	HOB150 BERICOM007	HOB206 EL-41UA299	HOB329 T15E01MT	HOB330 H-LED32V6	HOB341 STV-LC1914W	HOB418 ZD-RC30	BLAUPUNKT DMTECH DMTECH	HOB262 HOB262	
096	097	098	099	100	101	102	103	104	105	106	107	108	109	110	112	112	113	114	115	116	116	116	116	117	120	121	122	123	124	125	126
HOB344 HOF45A1-2	HOB249 PARS	HOB292 H502-2	HOB013 HOF-54B1.4	HOB339 GI S2138	HOB381 HOF12E 148GPD5	HOB346 HOF10G 705GPD9	SONIQ QT-112	SUNSTECH TL1970HD	HOB195 H-LCDDVD2200	HOB196 HOB196	HOB314 Singer LCDKZG -108	HOB386 RM-611	HOB308 IR1492 SENCOR	HOB310 HOB310	EMC RC1359	HOB342 STV-LC1985WL	HOB382 GI HOF12B44 INF028RD-NF031RD NF036RD 4IN1	NF039RD GPD11	TOSHIBA CT-8070	TOSHIBA CT-8507	TOSHIBA CT-90423	TOSHIBA CT-90423	TOSHIBA CT-90423	PC221 01	PC221 02	BC10SB BC10SB	daytron LCD TV	HOB358 RC-A03	RC A06	TLCD 32HD- TELEFUNKEN KAIMY KAIMY	

HUAYU® RM-L1120+15

HUAYU® RM-L1120+15

HOB688
ATLSS
HD-200S
KK-Y331J
KK-Y331J
HD LED100
GBTY
ONGOV59
XY-B02E
LCD TV PHONAR
PHONAR LED TV
DAWA MV
iDEA
iDEA
iDEA
iDEA
iDEA
iDEA
iDEA
AOC-02
DEX LT-2220
ORION
LED2643
Akai
SLP-006P
Fusion
FLTV
22H11
Fusion
FLTV
32H17
Shivaki
K77
Shivaki
K78
Supra
TV-DVD
RC-GK22G1
H-LCD3210
LED321LC
SKYPRIME HD
SUPRA
RC21b-1219



ORION LCD TC1860F1-RS JH-11370
LED-851
RC-D3
YC-53
STV-22LED5
LED-EH4720BF
DNS M28AM8
051D RED
33585
RC33729
HOB842
34090
34091
RC31277
Fusion RC25b
RCF23b
RC-E23
AKI AK61
AKI LCD AK66
AKI LCD AK68
AKI-OND IGO LCD
ONIDA LCD ON87
Muller RC1818 IR-V1
051D BLACK
SNOWA 51163
BLAUPUNKT
J-1274
RM-SK09
MERTER 33186
BRAVIS LED-1615
Marshal ME-2409



ONIDA
LCD1
Akai
HOF08J001
Polar 94
LTV6004
AN-LT3222
AN-LT3225
AN-LT2416
FUSION
HY-079
SATURN
LED40FHD500U
DEXP
16A3000
RUBIN
RB-28D772C
DNS
S19ASL1
XVISION
06-539W93-XV02X
RM-NST60
iSmart
ATV
VESTEL
LCD
T1396
VESTEL
LCD
T1560
HAIER
HTR-A10
EN3V39H
MICROMAX
RECONNECT
YASIN
HISENSE
SANSUI