


RM-L1098+12
**Instruction for UNIVERSAL
LCD/LED TV REMOTE
CONTROLLER**

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

Introduction:

RM-L1098+12 is the newest universal LCD/LED TV remote controller. Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.

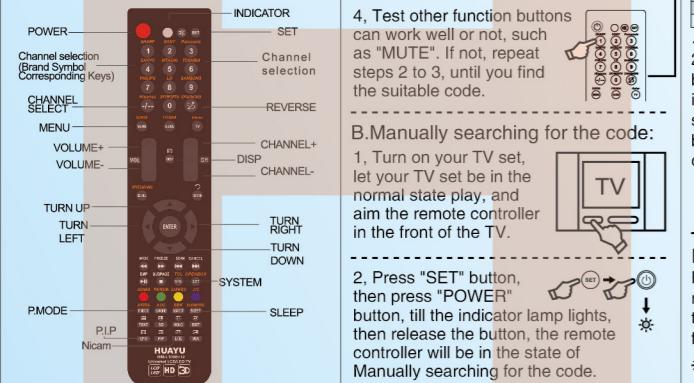

Battery Installation
In accordance with the "+,-" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-referable), which is shown in the figure.

**Battery Description**

- The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.
- Please do not put old and new batteries or different types of batteries together.
- In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries.
- You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

Methods for setting remote controller:

This remote controller has the following methods for setup, you can choose any of them.

A. Inputting code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.

3, Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off., setting to be finished. If the code is more than one set, please use first one at first.

4, Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

B. Manually searching for the code:
1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.

C. Automatically searching code:
1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2, Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.

3, Till the volume symbol appears on your TV, test other function buttons(except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

4, Please pay attention to your TV, see the volume symbol appears on your TV or not, if not, repeat steps 2 to 3, until you find the suitable code.

B. Способ ручного поиска кода:

1. Включите телевизор и направьте на него пульт.

2. Press and hold the "SET"button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.

3s → SET → VOL → SET

3. Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

D. Point to Point Brand Searching:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

4. После появления символа громкости проверьте другие кнопки (кроме кнопки настройки, кнопки питания, кнопки громкости). Если другие функции нормально, нажмите кнопку "настройки", индикатор настройки гаснет, настройка выполнена.

5s → 0 → VOL → SET

E. Restore factory Settings

Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

Русский**А.Поиск нужной марки телевизора с помощью ввода кода вручную**

1. Включите телевизор и в перечне кодов найдите тот, который соответствует марке Вашего телевизора.

2. Одновременно нажмите кнопки "SET" и "POWER", пока не загорится индикаторная лампочка.

3. Введите три первых цифры кода, соответствующего модели телевизора. После ввода кода индикатор перестанет гореть, установка завершена

4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

С.Автоматически поиска кода:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2, Удерживайте нажатой кнопку кода, пока не загорится индикаторная лампочка (около 3 секунд). Не

В. Способ ручного поиска кода:

1. Включите телевизор и направьте на него пульт.

2. Одновременно нажмите кнопки "SET" и "POWER", пока не загорится индикаторная лампочка. Индикаторная лампочка погаснет. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

3s → 0 → VOL → SET

3. Нажмите кнопку "громкость+", затем освободите её, когда появится символ громкости, при каждом нажатии индикатор мигает один раз, если не появится символ громкости, повторите операцию.

4. После появления символа громкости проверьте другие функции (кроме кнопки настройки, кнопки питания, кнопки громкости). Если другие функции нормально, нажмите кнопку "настройки", индикатор настройки гаснет, настройка выполнена.

5s → 0 → VOL → SET

Español**A.Ingresa el código**

1, Encienda el televisor , apunte el control remoto hacia televisor. luego

encontrar el correspondiente código de tres dígitos de la marca correspondiente en la tabla de códigos

2, Presione y mantenga el botón de ajuste(SET)durante unos 6 segundos hasta la luz indicador se encienda.

Ver si el símbolo de volumen aparece en la pantalla ,si es así,suelte de inmediato el botón SET para detener la búsqueda automática

6s → SET → VOL → SET

3, Ingresar primer conjunto de código de tres dígito, cada vez que un dígito es la entrada, la luz de indicación parpadea una vez, después que todos los 3 dígitos han ingresado , la luz de indicador estaria apagado, si el código es más de un conjunto. por favor, utilice la primera.

4, prueba otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará , lo que significa que la configuración se ha terminado, si no, repita los pasos 2 hasta que encuentre el código adecuado.

D.Mode de búsqueda de punto a punto

1, Encienda el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SKYWORTHY con su símbolo 0.

3, Приведите к перечню кодов найдите тот, который соответствует марке Вашего телевизора.

2, Presione al mismo tiempo el botón SET y POWER , hasta la luz indicador parpadea, Cuando aparece el símbolo de volumen en la pantalla de TV, suelte inmediatamente el botón, y la luz de indicador apagará. Probar si el control remoto funciona bien , si no, repita el procedimiento.

3s → 0 → VOL → SET

E.Restaurar los ajustes de fábrica

Pulse el botón "SET", despues pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

4, Despues de que el símbolo de volumen aparece, pruebe otro botón de función (excepto el ajuste(SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará , lo que significa que la configuración se ha terminado.**Warm Tips**

If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.
- If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
- who use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries

After-sales Service

If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services.

But do not disassemble or repair it by yourself.

We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product.

The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

000

AOC

GENERAL

LCD-831

LCD-832

EN

30303D

HOB301

MYSTERY

KT6957

8857

IZUMI

TL19H405B

IZUMI

0152

EN

30303D

HOB117

AKIRA

TC1860F1

HOB187

GK23J6-C15

013

AOC

AOC

014

GENERAL

HUAYU® RM-L1098+12

031	032	033	034	035	036	037	038	039	040	041	042	043	046	047	048	049	050	051	052	053	054	055	056	057	058	059	060	061	062	
HOB411 SUPRA RC12	RCF1B RCF1B	SUPRA BD-212	SUPRA HOF12H126 GPD11	SUPRA RC1b	SUPRA RC5b	SUPRA RC13b	STV-LC2615ED	HOB168 SHIVAKI BT0451C	HOB231 SHIVAKI 02	ROLSEN ER-31607R	HTC056 RC1994907-01	HTC058 RC198	HOB333 81E829	HOB394 81E503	HOB227 ORION	HOB252 OPENBOX -1253	HOB281 MYSTERY 5195	HOB282 MYSTERY 8151	HOB301 MYSTERY KT6957 6857	HOB326 MTV-1914LW	MESTERY LCD LED TV NEW	HSR499 HIVION	HOB402 ISTAR	HOB403 ISTAR	HOB405 ISTAR	ER-31607	HOB438 ER-31607R -1098#			
063	066	067	068	069	070	071	073	074	079	080	081	082	083	084	085	086	087	088	089	090	091	092	093	094	095	096	097	098	099	
LCD-2277RC	HOB302 HYUNDAI 1587 RCF1B	HOB376 H-LCD2202GCO VA1028SJ	HOB390 CH-2145	FUSION RC3b_1042	HOB198 FUNAI 48KEY	IR1628 FUNAIPC221	HOB018 ELENBERG Y27401	HOB354 ELENBERG	HOB151 BERICOM008	HOB189 HOB189	HOB264 RC-A3-01	HOB273 EN-21662B	HOB223 RC-L-05	HOB225 RC-L-06	HOB108 ACH-P-2	HOB149 BERICOM006	HOB150 BERICOM007	HOB206 EL-41UA299	HOB329 T15E01MT	HOB330 H-LED32V6	HOB341 STV-LC1914W	HOB418 ZD-RC30	DMTECH DMTECH	HOB262 HOB262	HOB344 HOF45A1-2	HOB249 PARS	HOB292 H502-2	HOB013 HOF-54B1.4		
100	101	102	103	104	105	106	107	108	109	110	112	113	114	115	116	117	120	121	122	123	124	125	126	127	130	131	132	133	134	135
HOB339 GI S2138	HOB381 HOF12E 148GPD5	HOB346 HOF10G 705GPD9	SONIQ QT-112	SUNSTECH TL1970HD	HOB195 H-LCDDVD2200	HOB196 HOB196	HOB314 Singer LCDKGZ -108	HOB386 RM-611	HOB308 IR1492 SENCOR	HOB310 HOB310	HOB342 STV -LC1985WL	HOB382 HOF12B441 GPD11	HOB220-NF021RD -NF028RD-NF031RD -NF036RD 4IN1	NF039RD NF039RD	PC221 01	PC221 02	BC10SB BC10SB	daytron LCD TV	HOB358 RC-A03	RC A06	RC A10	TLCD 32HD- TELEFUNKEN	KAIMY KAIMY	acer acer	HOB162 BERICOM009	HOB187 GK23J6-C15	LCD-2699	HOB229 OPTICUM9600 TS20	HOB242 RC1994925	HOB253 SNOWA

HUAYU® RM-L1098+12

HUAYU® RM-L1098+12

411	412	413	414	415	416	417	418	419	420	421	422	423	424	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441		
																													33585		
442	442	442	442	443	444	445	446	449	450	451	452	453	454	516	520	528	531	540	542	543	544	545	546	547	548	549	540	550	551	533	
																															
576	577	578	579	580	581	582	583	584	585																						
																															