

HUAYU[®]

RM-L1330+2

Product characteristic:

Thank you for using our company remote control product. RM-L1330+2 is a newly developed universal remote control product for TCL brand LCD/LED TV. Please try it after installing batteries at first time, if all functions are normal, you can use directly without setting. If it can't work normal, you need to make the following setting, then you can use for your TV. This remote control has a permanent memory function, no need to be reset when you change batteries.



RC311S RC3100N08 CSR722-TN1

Automatically searching code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.
2, Press and hold the "MUTE" button for about 6 seconds, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "MUTE" button at once, set finished.
3, Test other function buttons can work well or not, If not, repeat steps 2 to 3, until you find the suitable code.



RC311S RC3100L07 RC2000E02

Restore factory Setting:

Press "POWER" button, then press "0", release the button, the remote controller restore factory Settings.

Compatible Types List:


List some suitable types of remote control according to relevant materials, for your guidance.



RC3100L09 RC802N Ya12 RC3100L09



RC311S HITACHI CLE-1025 RRS311S SMART RC3100L09

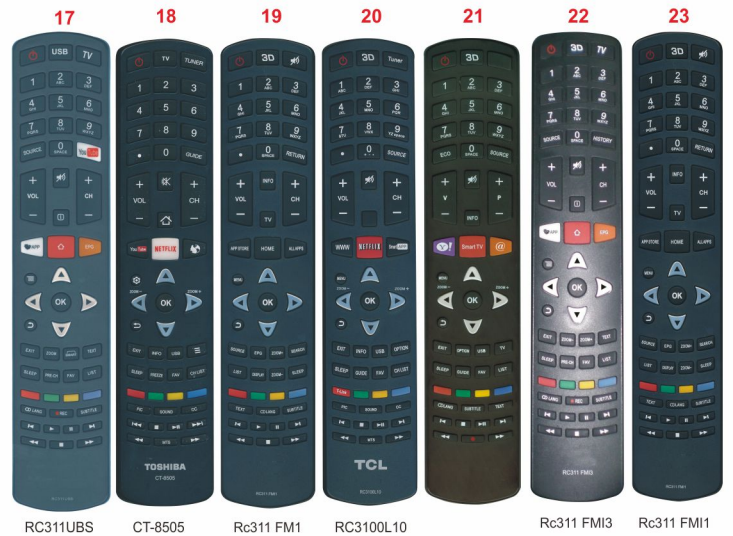

RC311UBS CT-8505 Rc311 FM1 RC3100L10 RC311 FM3 Rc311 FM1



Rc311 FA1 RC311 FM2 Shivaki Shivaki

240*50mm

HUAYU®

RM-L1330+2

О продукте:

Благодарим вас за выбор в пользу пульта дистанционного управления нашей компании, RM-L1330+2 - это новый универсальный пульт дистанционного управления для LCD/LED-телевизоров марки TCL. После установки элементов питания проверьте функционал пульта. Если все функции отвечают требованиям, продукт можно использовать сразу без какой-либо дополнительной настройки. Если же он не работает должным образом, пульт следует настроить следующим образом. После этого вы сможете использовать пульт для своего телевизора. Данный пульт не потеряет установленные настройки при смене батареек, соответственно, вам не нужно будет снова его настраивать

Автоматический поиск кода:

1. Включите телевизор, оставьте его в стандартном режиме воспроизведения, и направьте на него пульт дистанционного управления.

2. Зажмите кнопку «MUTE» и удерживайте ее в течение приблизительно 6 секунд, пока пульт дистанционного управления не перейдет в состояние автоматического поиска кода, обратите внимание на ваш телевизор, посмотрите, появился ли символ громкости на экране. Если появился, пожалуйста, сразу отпустите кнопку «MUTE», установка завершена.

3. Проверьте, работают ли другие функциональные кнопки. Если нет, повторяйте 2 и 3 шага, пока не отыщете подходящий код.

Восстановление до заводских настроек

Зажмите кнопку «POWER», затем зажмите «0», отпустите кнопки, после чего пульт дистанционного управления восстановится до заводских настроек.

Список совместимых моделей

Приведите некоторые подходящие типы пультов в соответствии с необходимыми для вашего руководства материалами.

B0065204